
OWNER'S MANUAL

LEVER OPERATED CHAIN HOIST LB SERIES

MODEL L5

3/4 Ton through 9 Ton Capacity

Code, Lot and Serial Number

WARNING

This equipment should not be installed, operated or maintained by any person who has not read and understood all the contents of this manual. Failure to read and comply with the contents of this manual can result in serious bodily injury or death, and/or property damage.

HARRINGTON
A KITO GROUP COMPANY

Table of Contents

Section **Page Number**

- 1.0 Important Information and Warnings 4
 - 1.1 Terms and Summary
 - 1.2 Warning Tags and Labels

- 2.0 Technical Information..... 7
 - 2.1 Specifications
 - 2.2 Dimensions
 - 2.3 Optional Equipment

- 3.0 Preoperational Procedures 12
 - 3.1 Chain
 - 3.2 Attachment Points
 - 3.3 Mounting the Hoist
 - 3.4 Preoperational Checks and Trial Operation

- 4.0 Operation 14
 - 4.1 Introduction
 - 4.2 Shall's and Shall Not's for Operation
 - 4.3 Hoist Operation
 - 4.4 Load Limit Warning Handle Option
 - 4.5 Slip Clutch Option

- 5.0 Inspection 21
 - 5.1 General
 - 5.2 Inspection Classification
 - 5.3 Preoperational Inspection
 - 5.4 Frequent Inspection
 - 5.5 Periodic Inspection

| Section | Page Number |
|----------------|--------------------------------------|
| 5.6 | Occasionally Used Hoists |
| 5.7 | Inspection Records |
| 5.8 | Inspection Methods and Criteria |
| 6.0 | Maintenance & Handling 34 |
| 6.1 | Lubrication |
| 6.2 | Disassembly, Assembly and Adjustment |
| 6.3 | Hoist Disassembly |
| 6.4 | Hoist Assembly |
| 6.5 | Chaining |
| 6.6 | Storage |
| 6.7 | Outdoor Installation |
| 7.0 | Troubleshooting 48 |
| 8.0 | Warranty 53 |
| 9.0 | Parts List 55 |

1.0 Important Information and Warnings

1.1 Terms and Summary

This manual provides important information for personnel involved with the installation, operation and maintenance of this product. Although you may be familiar with this or similar equipment, it is strongly recommended that you read this manual before installing, operating or maintaining the product.

Danger, Warning, Caution and Notice

Throughout this manual there are steps and procedures that can present hazardous situations. The following signal words are used to identify the degree or level of hazard seriousness.

⚠ DANGER Danger indicates an imminently hazardous situation which, if not avoided, **will** result in **death or serious injury**, and property damage.

⚠ WARNING Warning indicates an imminently hazardous situation which, if not avoided, **could** result in **death or serious injury**, and property damage.

⚠ CAUTION Caution indicates a potentially hazardous situation which, if not avoided, **may** result **minor or moderate injury** or property damage.

NOTICE Notice is used to notify people of installation, operation, or maintenance information which is important but not directly hazard-related.

⚠ CAUTION

These general instructions deal with the normal installation, operation, and maintenance situations encountered with the equipment described herein. The instructions should not be interpreted to anticipate every possible contingency or to anticipate the final system, crane, or configuration that uses this equipment. For systems using the equipment covered by this manual, the supplier and owner of the system are responsible for the system's compliance with all applicable industry standards, and with all applicable federal, state and local regulations/codes.

This manual includes instructions and parts information for a variety of hoist types. Therefore, all instructions and parts information may not apply to any one type or size of specific hoist. Disregard those portions of the instructions that do not apply.

Record your hoist's Code, Lot and Serial Number (see Section 9) on the front cover of this manual for identification and future reference to avoid referring to the wrong manual for information or instructions on installation, operation, inspection, maintenance, or parts.

Use only Harrington authorized replacement parts in the service and maintenance of this hoist.

WARNING

Equipment described herein is not designed for and **MUST NOT** be used for lifting, supporting, or transporting people, or for lifting or supporting loads over people.

Equipment described herein should not be used in conjunction with other equipment unless necessary and/or required safety devices applicable to the system, crane, or application are installed by the system designer, system manufacturer, crane manufacturer, installer, or user.

Modifications to upgrade, rerate, or otherwise alter this equipment shall be authorized only by the original equipment manufacturer.

If a below-the-hook lifting device or sling is used with a hoist, refer to ANSI/ASME B30.9, "Safety Standard for Slings" or ANSI/ASME B30.20, "Safety Standard for Below-the-Hook Lifting Devices".

Hoists used to handle hot molten material may require additional equipment or devices. Refer to ANSI Z241.2, "Safety Requirements for Melting and Pouring of Metals in the Metalcasting Industry".

Failure to read and comply with any one of the limitations noted herein can result in serious bodily injury or death, and/or property damage.

NOTICE

It is the responsibility of the owner/user to install, inspect, test, maintain, and operate a hoist in accordance with ANSI/ASME B30.21, "Manually Lever Operated Hoists" and OSHA Regulations. If the hoist is installed as part of a total lifting system, such as an overhead crane or monorail, it is also the responsibility of the owner/user to comply with the applicable ANSI/ASME B30 volume that addresses that type of equipment.


It is the responsibility of the owner/user to have all personnel that will install, inspect, test, maintain, and operate a hoist read the contents of this manual and applicable portions of ANSI/ASME B30.21, "Manually Lever Operated Hoists" and OSHA Regulations.

If the hoist owner/user requires additional information, or if any information in the manual is not clear, contact Harrington or the distributor of the hoist. Do not install, inspect, test, maintain, or operate this hoist unless this information is fully understood.

A regular schedule of inspection of the hoist in accordance with the requirements of ANSI/ASME B30.21 should be established and records maintained.

1.2 Warning Tags and Labels


The warning tag illustrated below in Figure 1-1 is supplied with each hoist shipped from the factory. If the tag is not attached to your hoist's no-load side of the load chain, order a tag from your dealer and install it. Read and obey all warnings attached to this hoist. Tag is not shown actual size.

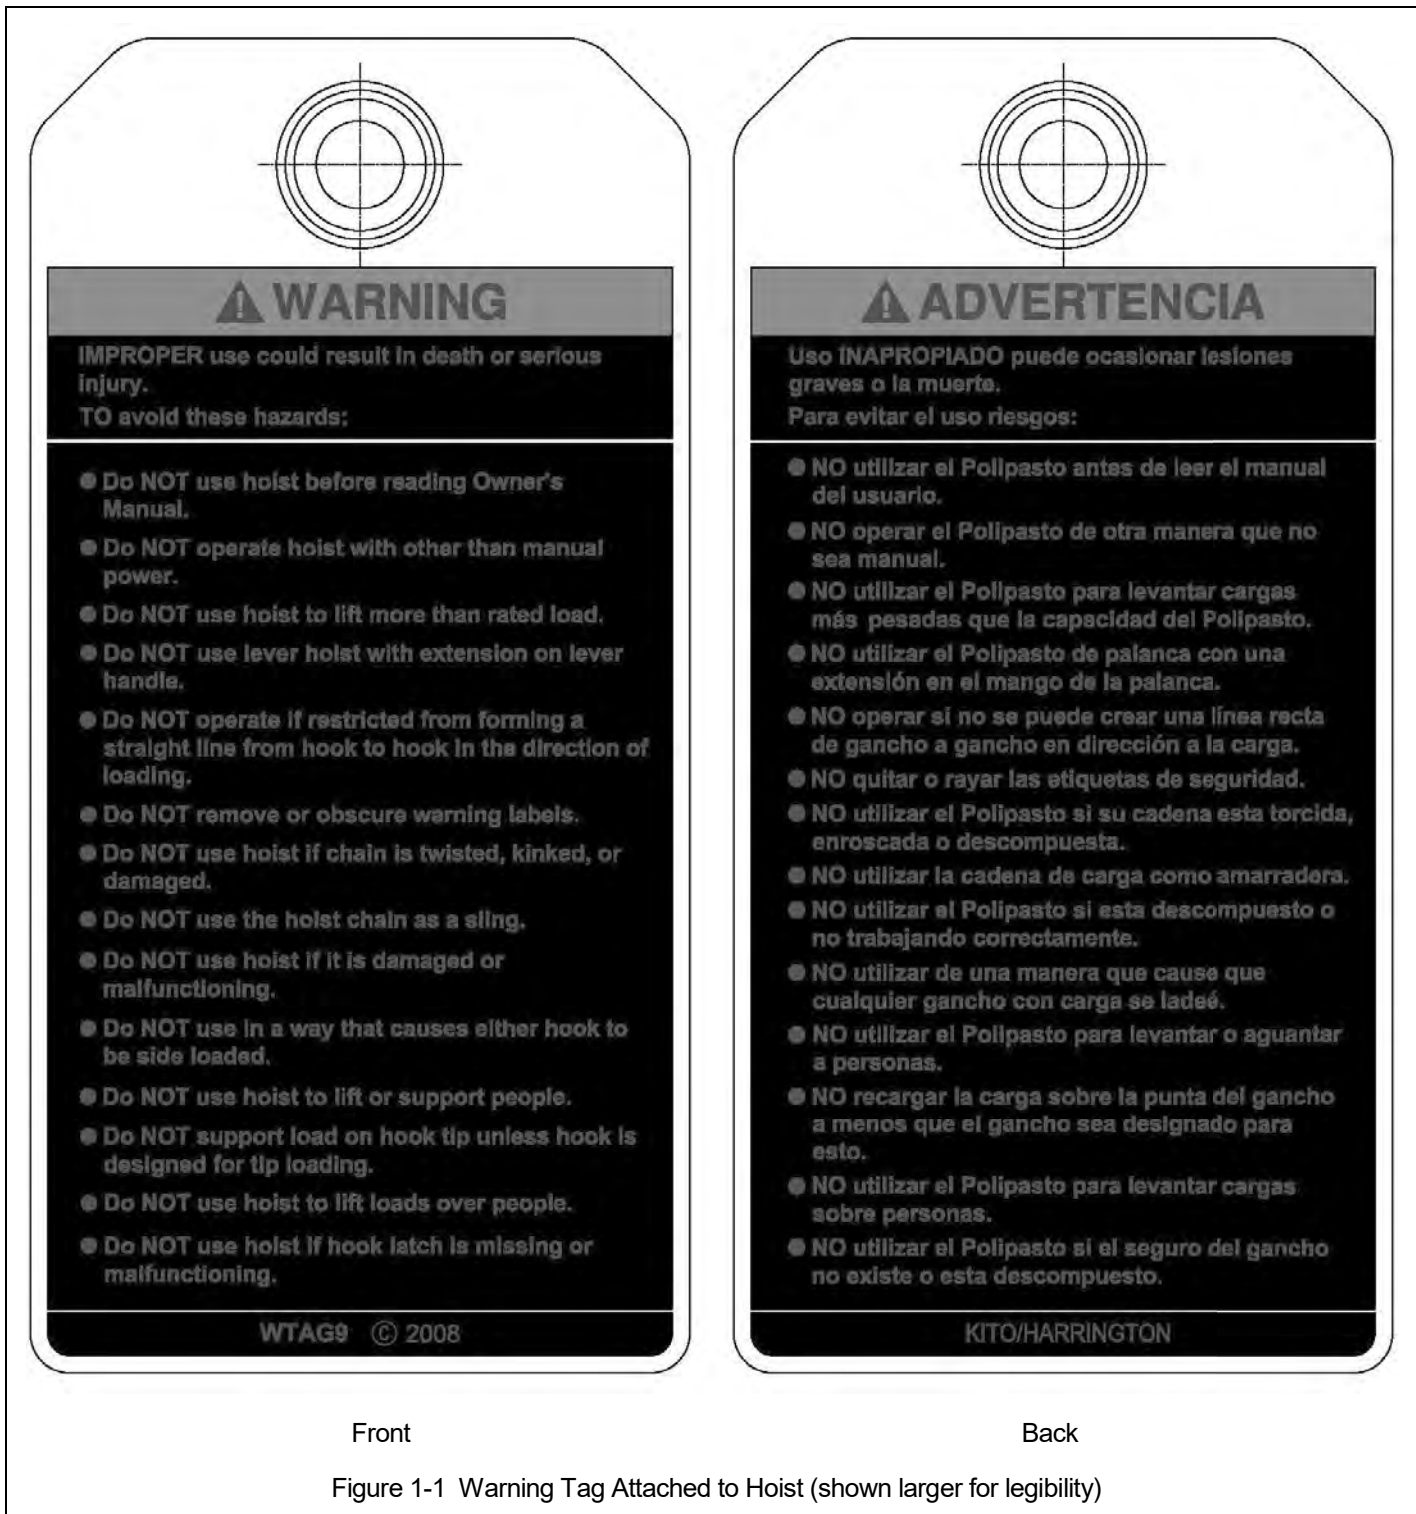

2.0 Technical Information

2.1 Specifications

2.1.1 Product Code

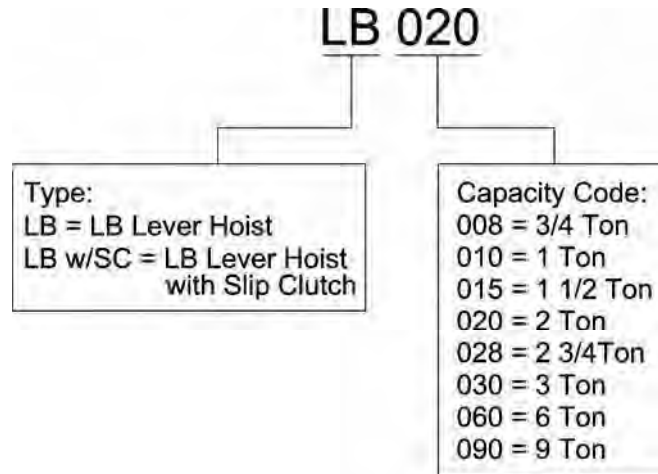

2.1.2 Operating Conditions and Environment

Temperature range: -40° to +140°F (-40° to +60°C)

Humidity: 100% or less (Not an Underwater Device)

| Cap. (Tons) | Product Code | Std. Lift (ft) | Pull to Lift Load* (lbs) | Load Chain Diameter (mm) x Chain Fall Lines | Net Weight (lbs) | Shipping Weight Approx. (lbs) | Weight for Additional One Foot of Lift (lbs) |
|-------------|--------------|----------------|--------------------------|---|------------------|-------------------------------|--|
| ¾ | LB008 | 5 | 54 (36) | 5.6 x 1 | 13 | 13 | 0.5 |
| 1 | LB010 | | 72 (46) | | | 14 | |
| 1½ | LB015 | | 64 (45) | 7.1 x 1 | 18 | 18 | 0.7 |
| 2 | LB020 | | 59 (42) | 8.8 x 1 | 25 | 26 | 1.1 |
| 2¾ | LB028 | | 81 (57) | | | | |
| 3 | LB030 | | 69 | 10.0 x 1 | 33 | 35 | 1.5 |
| 6 | LB060 | | 72 | 10.0 x 2 | 57 | 60 | 3.2 |
| 9 | LB090 | | 78 | 10.0 x 3 | 88 | 93 | 4.7 |

*Numbers in parentheses are for hoists with the optional load limit warning handle.

2.2 Dimensions

| Table 2-2 Hoist Dimensions | | | | | | | | |
|----------------------------|--------------|--------|--------|-----------------|-------------|--------|--------|--------|
| Cap. (Tons) | Product Code | a (in) | b (in) | Headroom C (in) | D* (in) | e (in) | f (in) | g (in) |
| ¾ | LB008 | 5.7 | 4.7 | 11.0 | 9.6 (14.4) | 3.8 | 1.6 | 0.9 |
| 1 | LB010 | | | 11.8 | | | | 1.1 |
| 1½ | LB015 | 6.3 | 5.0 | 13.2 | 10.4 (14.4) | 3.9 | 1.5 | 1.3 |
| 2 | LB020 | 6.8 | 5.9 | 14.8 | | 4.0 | 1.8 | 1.4 |
| 2¾ | LB028 | | | | 1.5 | | | |
| 3 | LB030 | 7.5 | 6.3 | 15.6 | 16.3 (16.9) | 4.4 | 2.3 | 2.0 |
| 6 | LB060 | | 8.5 | 21.3 | | | | 2.9 |
| 9 | LB090 | | 12.0 | 26.8 | | | | 4.1 |

*Dimensions in parentheses are for hoists with the optional load limit warning handle.


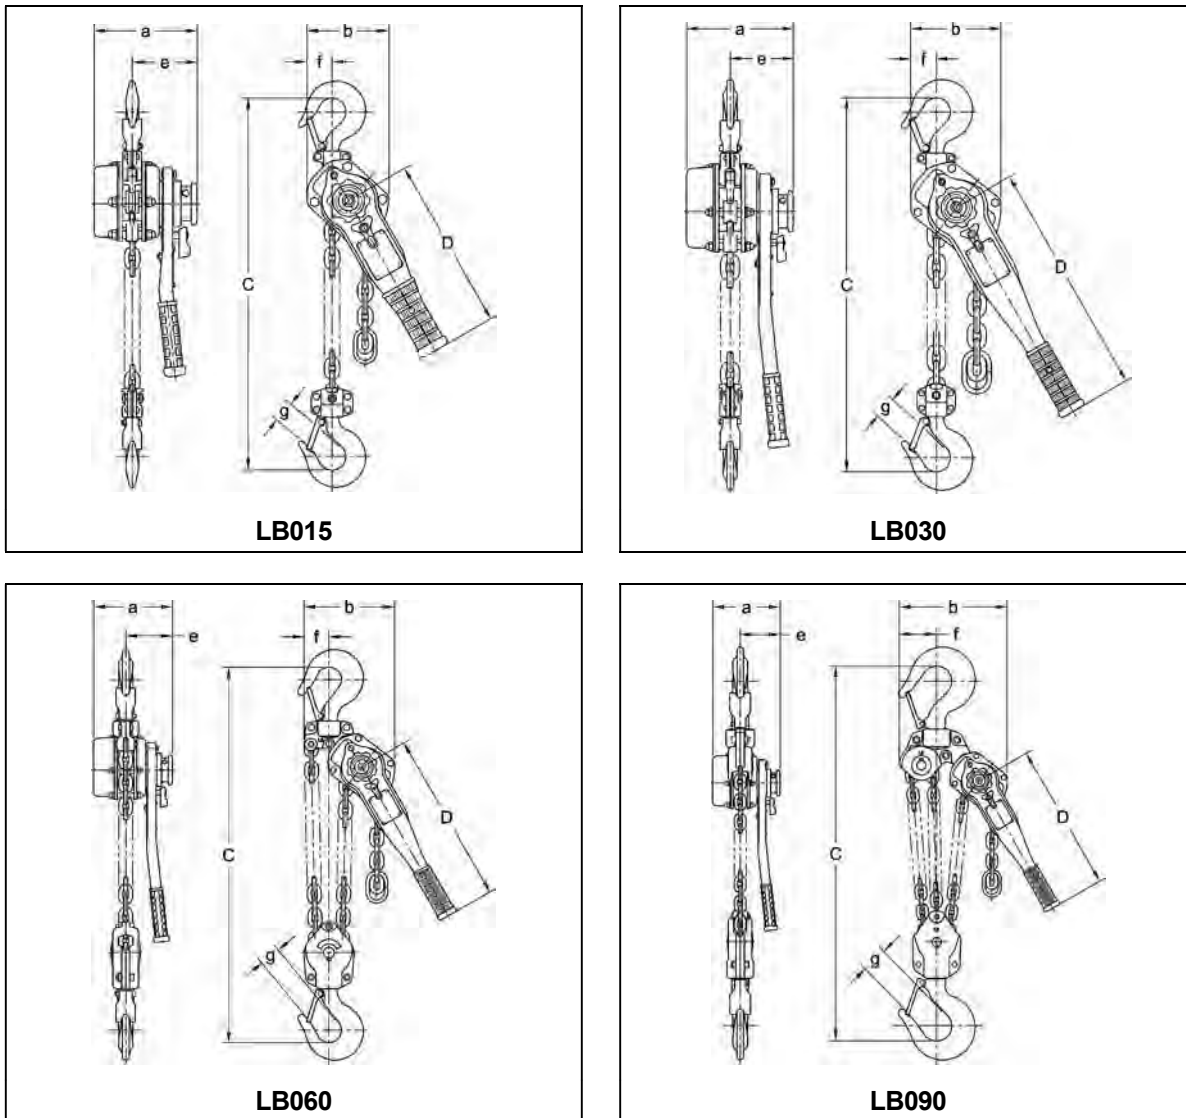


Figure 2-1 Hoist Dimensions (Refer Table 2-2)

Table 2-3 Hook Dimension*

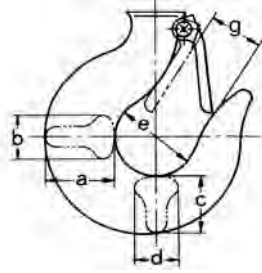

T = Top Hook
 B = Bottom Hook
 Units = inch

| Cap. (Tons) | Product Code | Hook | a | b | c | d | e | g |
|-------------|--------------|-------|-----|-----|------|-----|-----|------|
| ¾ | LB008 | T & B | 0.9 | 0.6 | 0.8 | 0.6 | 1.4 | 0.93 |
| 1 | LB010 | T & B | | | | | 1.7 | 1.14 |
| 1½ | LB015 | T & B | 1.2 | 0.7 | 1.0 | 0.7 | 1.7 | 1.26 |
| 2 | LB020 | T & B | 1.4 | 0.8 | 1.14 | 0.8 | 1.9 | 1.44 |
| 2¾ | LB028 | | | | | | | |
| 3 | LB030 | T & B | 1.6 | 1.0 | 1.2 | 1.0 | 2.0 | 1.54 |
| 6 | LB060 | T & B | 2.1 | 1.3 | 1.6 | 1.3 | 2.4 | 1.97 |
| 9 | LB090 | T & B | 2.6 | 1.6 | 2.0 | 1.6 | 3.4 | 2.85 |

*Refer to Section 5.7 for inspection dimensions and limits.

2.3 Optional Equipment

2.3.1 Load Limit Warning Handle (LLWH)

- **⚠ WARNING** Refer to Section 4.4 for detailed LLWH information.

2.3.2 Shipyard Hooks (SYH)

- The SYH is a special hook with a heavier design for use in the metal and ship building industries. They are designed to aid in the effective positioning of fixtures and steel plate before welding. Hook latches are included with all SYH. Refer to Figure 2-2.
- **⚠ WARNING** Shipyard Hook is designed for tip loading. Improper use could result in death or serious injury. To avoid these hazards:
 - Follow the hoist operating instructions in Section 4.0.
 - Read and understand all instructions before using.
 - Follow instructions on all related warning tags.
 - Make sure the Shipyard Hook is secure so it can not unintentionally disengage from load.
- The SYH is available in Top and Bottom versions and in two sizes: 1½ and 3 Tons.
- A yoke is included with the SYH. See Section 9.3, Parts List for a complete SYH part listing.

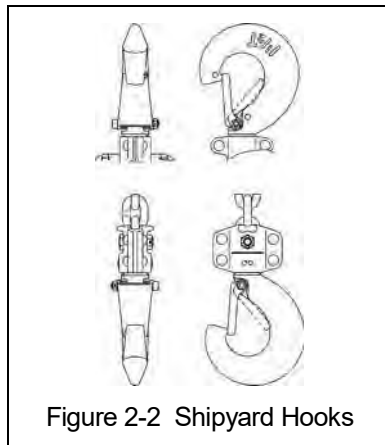


Figure 2-2 Shipyard Hooks

2.3.3 Top Hook Extender

- The Top Hook Extender is designed to move the hoist body away from the attachment point. It can be used to place the hoist lower in vertical application or increase the hoist reach in horizontal applications. Refer to Figure 2-3.
- The Top Hook Extender Parts Kit contains a hook set, chain, top and bottom yokes, extension block and all necessary hardware. Kits are available for LB008 through LB030 hoists.
- The standard extender chain length is 18 inches; other lengths are available up on request.
- The extender chain is the same size and grade Harrington chain as is used on the hoist.
- Top Hook Extender can be acquired upon request with Latch Lock, Inspection or Ship Yard type hooks.
- See Section 9.3, Parts List for a complete Top Hook Extender part listing.

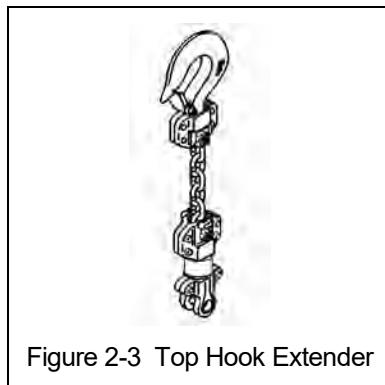


Figure 2-3 Top Hook Extender

2.3.4 Latch Lock Hooks

- The Bullard® hook has a conventional hook shape with a special, heavy-duty, rotating, spring-loaded, locking latch. The latch remains locked until it is released by the operator.
- The Shur-Loc® hook is a special design hook where the latch remains fixed and the hook swings to unlock. The hook cannot be opened while a load is applied.
- Installation of these hooks may change the headroom.
- See Section 9.3, Parts List for a complete Latch Lock Hook part listing.

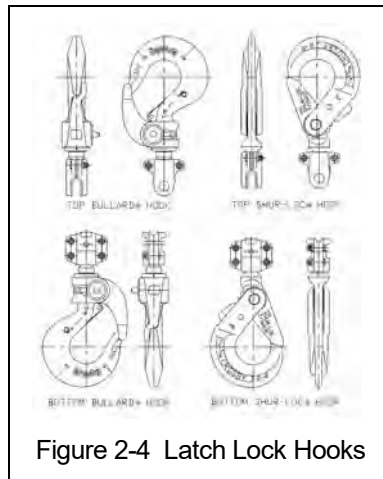


Figure 2-4 Latch Lock Hooks

2.3.5 Inspection Hooks

- The Inspection Hook is designed to facilitate the inspection of the internal surfaces of the hook yoke and shank portion of the hook itself. The Inspection Hook is suitable for applications where inspection of the internal parts of the hook set is required. The inspection hook uses the standard Harrington hook set and is assembled with high-strength locking fasteners instead of rivets. Inspection hooks are available in top and bottom versions. Refer to Figure 2-5.
- Disassembly and re-assembly involves removal and reinstallation of the yoke fasteners of the Inspection Hook Set Assembly followed by testing of the hoist prior to returning it to service.
- The Inspection Hook is available for LB008 through LB030 hoists.
- See Section 9.3, Parts List for a complete Inspection Hook part listing.

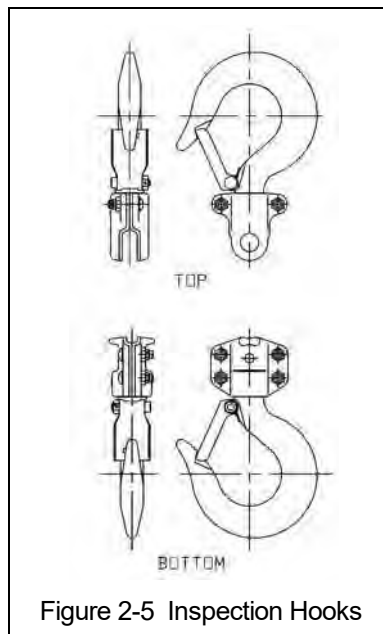


Figure 2-5 Inspection Hooks


2.3.6 Slip Clutch

- **▲WARNING** Refer to Section 4.5 for detailed Slip Clutch information.

3.0 Preoperational Procedures

3.1 Chain

- 3.1.1 **⚠️ WARNING** A chain stopper link must be installed on the second to last chain link on the no-load end of the load chain.
- 3.1.2 **⚠️ WARNING** Verify that the load chain is not twisted or tangled prior to operating the hoist. Make sure the bottom hook on the 6 (LB060) and 9 (LB090) Ton multiple fall hoists is not capsized. See Figures 3-1 and 3-2. Correct all chain irregularities before conducting the first hoist operation.

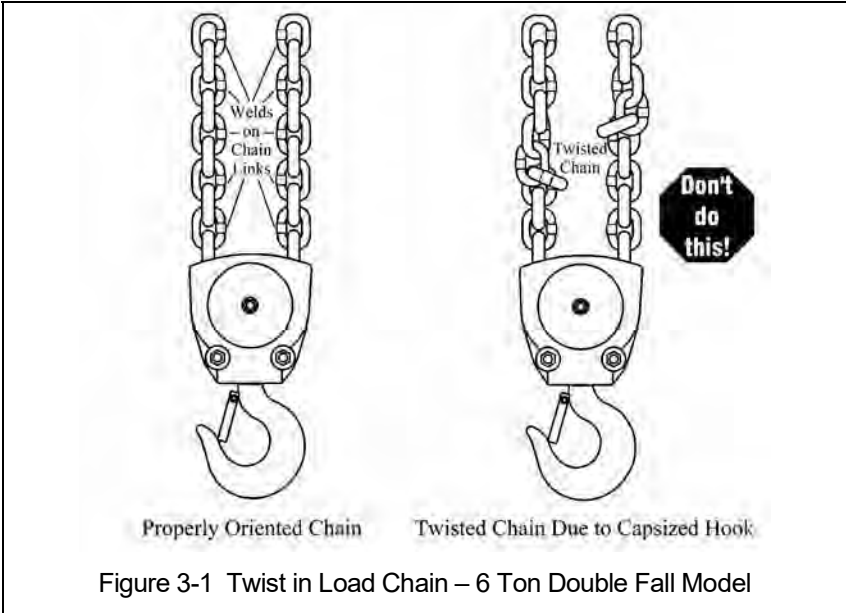

- 3.1.3 **⚠️ CAUTION** Model L4 and Model L5 chain is not interchangeable.

3.2 Attachment Points

3.2.1 **⚠ WARNING** Prior to attaching the hoist ensure that all attachment points, suspension components and supporting structure are adequate to support the hoist and its load. If necessary consult a professional that is qualified to evaluate the adequacy of the suspension location and its supporting structure.

3.2.2 **NOTICE** See Section 6.6 for outdoor installation considerations.

3.3 Mounting the Hoist

3.3.1 Hook Mounted to a Fixed Location - Attach the hoist's top hook to the fixed suspension point.

3.3.2 **⚠ WARNING** Ensure that the fixed suspension point rests on the center of the hook's saddle and that the hook's latch is engaged.

3.4 Preoperational Checks and Trial Operation

3.4.1 **⚠ WARNING** Confirm the adequacy of the rated capacity for all slings, chains, wire ropes and all other lifting attachments before use. Inspect all load suspension members for damage prior to use and replace or repair all damaged parts.

3.4.2 **⚠ WARNING** Verify and correct all chain irregularities prior to operating the hoist. Refer to Section 3.1.

3.4.3 Measure and record the "k" dimension of all hooks on hoist. See Table 5-10 under Section 5, "Inspection".

3.4.4 Record the hoist's Code, Lot and Serial Number (from the name plate on the hoist; see Section 9) in the space provided on the cover of this manual.

3.4.5 Ensure that the hoist is properly installed to a fixed point.

3.4.6 Ensure that all nuts, bolts and split pins (cotter pins) are sufficiently fastened.

3.4.7 Confirm proper operation.

- Before operating read and become familiar with Section 4 - Operation.
- Before operating ensure that the hoist meets the Inspection, Testing and Maintenance requirements of ANSI/ASME B30.21.
- Before operating ensure that nothing will interfere with the full range of the hoist's operation.

4.0 Operation

4.1 Introduction

DANGER

DO NOT WALK UNDER A SUSPENDED LOAD

WARNING

HOIST OPERATORS SHALL BE REQUIRED TO READ THE OPERATION SECTION OF THIS MANUAL, THE WARNINGS CONTAINED IN THIS MANUAL, INSTRUCTION AND WARNING LABELS ON THE HOIST OR LIFTING SYSTEM, AND THE OPERATION SECTIONS OF ANSI/ASME B30.21 and ANSI/ASME B30.10. THE OPERATOR SHALL ALSO BE REQUIRED TO BE FAMILIAR WITH THE HOIST AND HOIST CONTROLS BEFORE BEING AUTHORIZED TO OPERATE THE HOIST OR LIFTING SYSTEM.

HOIST OPERATORS SHOULD BE TRAINED IN PROPER RIGGING PROCEDURES FOR THE ATTACHMENT OF LOADS TO THE HOIST HOOK.

HOIST OPERATORS SHOULD BE TRAINED TO BE AWARE OF POTENTIAL MALFUNCTIONS OF THE EQUIPMENT THAT REQUIRE ADJUSTMENT OR REPAIR, AND TO BE INSTRUCTED TO STOP OPERATION IF SUCH MALFUNCTIONS OCCUR, AND TO IMMEDIATELY ADVISE THEIR SUPERVISOR SO CORRECTIVE ACTION CAN BE TAKEN.

HOIST OPERATORS SHOULD HAVE NORMAL DEPTH PERCEPTION, FIELD OF VISION, REACTION TIME, MANUAL DEXTERITY, AND COORDINATION.

HOIST OPERATORS SHOULD **NOT** HAVE A HISTORY OF OR BE PRONE TO SEIZURES, LOSS OF PHYSICAL CONTROL, PHYSICAL DEFECTS, OR EMOTIONAL INSTABILITY THAT COULD RESULT IN ACTIONS OF THE OPERATOR BEING A HAZARD TO THE OPERATOR OR TO OTHERS.

HOIST OPERATORS SHOULD **NOT** OPERATE A HOIST OR LIFTING SYSTEM WHEN UNDER THE INFLUENCE OF ALCOHOL, DRUGS, OR MEDICATION.

NOTICE

- Read ANSI/ASME B30.21 and ANSI/ASME B30.10.
- Read the hoist manufacturer's Operating and Maintenance Instructions.
- Read all labels attached to equipment.

The operation of a hoist involves more than activating the hoist's controls. Per the ANSI/ASME B30 standards, the use of a hoist is subject to certain hazards that cannot be mitigated by engineered features, but only by the exercise of intelligence, care, common sense, and experience in anticipating the effects and results of activating the hoist's controls. Use this guidance in conjunction with other warnings, cautions, and notices in this manual to govern the operation and use of your hoist.

4.2 Shall's and Shall Not's for Operation

WARNING

Improper operation of a hoist can create a potentially hazardous situation which, if not avoided, could result in death or serious injury, and substantial property damage. To avoid such a potentially hazardous situation **THE OPERATOR SHALL:**

- **NOT** lift more than rated load for the hoist.
- **NOT** use damaged hoist or hoist that is not working properly.
- **NOT** use hoist with twisted, kinked, damaged, or worn chain.
- **NOT** use hoist if the bottom hook is capsized (multiple fall hoists - see Section 3.1).
- **NOT** use the hoist to lift, support, or transport people.
- **NOT** lift loads over people.
- **NOT** apply load unless load chain is properly seated in the load sheave (and idle sheave for hoist with multiple chain falls).
- **NOT** use the hoist in such a way that could result in shock or impact loads being applied to the hoist.
- **NOT** attempt to lengthen the load chain or repair damaged load chain.
- **NOT** operate hoist when it is restricted from forming a straight line from hook to hook in the direction of loading.
- **NOT** use load chain as a sling or wrap load chain around load.
- **NOT** use hoist with extension on lever handle.
- **NOT** apply load if binding prevents equal loading on all load-supporting chains.
- **NOT** operate beyond the limits of the load chain travel.
- **NOT** support load on hook tip unless hook is designed for tip loading.
- **NOT** use in a way that causes either hook to be side-loaded.
- **NOT** leave load supported by the hoist unattended unless specific precautions have been taken.
- **NOT** allow the chain, or hook to be used as an electrical or welding ground.
- **NOT** allow the chain, or hook to be touched by a live welding electrode.
- **NOT** remove or obscure the warnings on the hoist.
- **NOT** operate a hoist on which the safety placards or decals are missing or illegible.
- Be familiar with operating controls, procedures, and warnings.
- Make sure the unit is securely attached to a suitable support before applying load.
- Make sure load slings or other approved single attachments are properly sized, rigged, and seated in the hook saddle.
- Take up slack carefully - make sure load is balanced and load-holding action is secure before continuing.
- Make sure all persons stay clear of the supported load.
- Protect the hoist's load chain from weld splatter or other damaging contaminants.
- Report Malfunctions or unusual performances (including unusual noises) of the hoist and remove the hoist from service until the malfunction or unusual performance is resolved.
- Warn personnel before lifting or moving a load.
- Warn personnel of an approaching load.

CAUTION


Improper operation of a hoist can create a potentially hazardous situation which, if not avoided, could result in minor or moderate injury, or property damage. To avoid such a potentially hazardous situation **THE OPERATOR SHALL:**

- Maintain a firm footing or be otherwise secured when operating the hoist.
- Check brake function by tensioning the hoist prior to each lift operation.
- Use hook latches. Latches are to retain slings, chains, etc. under slack conditions only.
- Make sure the hook latches are closed and not supporting any parts of the load.
- Make sure the load is free to move and will clear all obstructions.
- Avoid swinging the load or hook.
- Make sure hook travel is in the same direction as shown on controls.
- Inspect the hoist regularly, replace damaged or worn parts, and keep appropriate records of maintenance.
- Use the hoist manufacturer's recommended parts when repairing the unit.
- Lubricate load chain per hoist manufacturer's recommendations.
- **NOT** use the hoist load limiting or warning device to measure load.
- **NOT** allow your attention to be diverted from operating the hoist.
- **NOT** allow the hoist to be subjected to sharp contact with other hoists, structures, or objects through misuse.
- **NOT** adjust or repair the hoist unless qualified to perform such adjustments or repairs.

4.3 Hoist Operation

4.3.1 Free Chain Principle

- Free chaining allows the load chain to be moved freely because the brake is released under no load situations.
- Pulling the free knob actuates the internal spring to release the mechanical brake allowing the load chain to be pulled in either direction to the desired length. Refer to Figure 4-1.
- The brake is engaged during lowering or lifting the load.

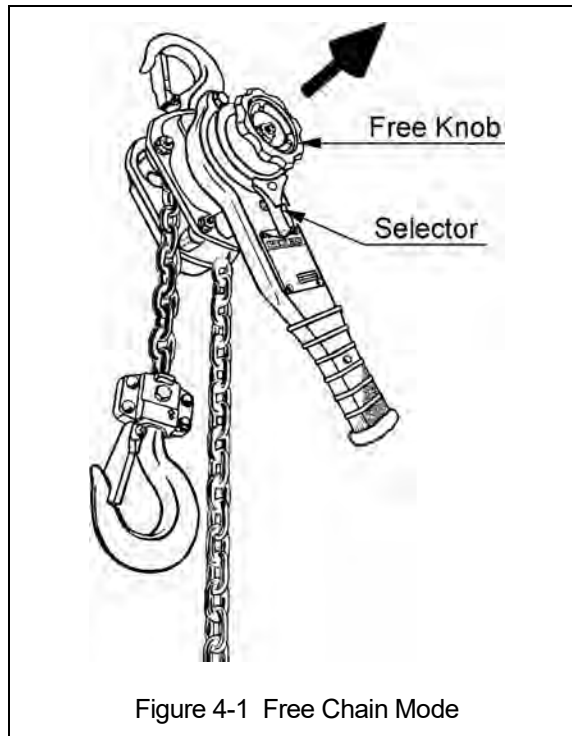

4.3.2 Free Chain Operation

- 1) **⚠ DANGER** Do not operate the hoist Free Knob while a load is applied to the hoist.
- 2) **⚠ DANGER** Do not touch the hoist Free Knob during lifting or lowering of the load.
- 3) **⚠ WARNING** Always check that the selector is placed in the proper position.
- 4) Set the Selector to the "N" position. The Selector is located under the Free Knob on the hand lever.
- 5) Pull the Free Knob out. The Free Knob turns counterclockwise and "snaps" out.
- 6) Pull the load chain to move the hook to the desired position.
- 7) **⚠ CAUTION** Do not pull the load chain suddenly in free chain mode. Excessive pulling may set the brake and not allow the load chain to move. If this occurs the hoist must be reset.
- 8) To reset the hoist to operate, rotate the Free Knob clockwise while pulling lightly on the load side chain. Once slack is removed, the Free Knob "snaps" in. This resets the brake and allows the hoist to be operated with the hand lever.

- 4.3.3 Lifting and Lowering Operation – Operating the lever with the selector set to the lifting “UP” or the lowering “DN” position, the hoist performs as follows:
- Set the selector to the direction of load movement desired and ratchet the lever back and forth. Refer to Table 4-1.
 - In lifting mode, the mechanical brake is engaged and supports the load on the pawls when the lever stops.
 - In lowering mode, lever operation releases the mechanical brake and lowers the load, when the lever stops, the mechanical brake is engaged and supports the load.
 - The brake is always engaged in the lifting and lowering modes.
 - If hand lever movement does not produce lifting, pull down the load side of the load chain while ratcheting until load chain slack is removed.

| Table 4-1 Hoist Lever Operation | | |
|---------------------------------|------------------|---------------|
| Selector Position | Lever Rotation | Load Movement |
| UP | Clockwise | Lift |
| DN | Counterclockwise | Lower |

- 4.3.4 **⚠ DANGER** Do not operate the free chain knob in lifting or lowering.
- 4.3.5 **⚠ CAUTION** Before operating, make sure that the hoist is not in the free chain mode and the selector is in the correct operating position.
- 4.3.6 **⚠ CAUTION** Under no load conditions, in the case that the load chain does not lower against your lowering operation, operate the grip with the load-side chain pulled lightly.


4.4 Load Limit Warning Handle (LLWH) Option

- 4.4.1 The LLWH is designed as a load detecting device to warn an operator that an excessive load has been applied to the hoist.
- 4.4.2 The LLWH is used for applications that require a load sensing feature that actuates within 10% of its setting. Exceeding the lever pull force limit (related to 100 to 120 % of the rated capacity) compresses the spring and deflects the lever grip. The LLWH deflects 15 degrees and registers a visual red signal to indicate that its setting has been reached. Refer to Table 4-2.
- 4.4.3 **⚠ DANGER** Disregarding the overload sign could cause bodily harm or damage to the hoist. Do not lift an overload.
- 4.4.4 **⚠ CAUTION** Do not allow dust or foreign objects to get into the LLWH.
- 4.4.5 **⚠ WARNING** Never adjust the signal setting to greater than 100 to 120 % of the rated capacity.
- 4.4.6 Excessive impact on the lever may result in a malfunctioning signal or damage to the components.
- 4.4.7 Using the hoist recklessly may cause the LLWH to work improperly.

| Table 4-2 Signal Warnings | | |
|---------------------------|-------------|---------------------------|
| Signal Color | Load Status | INSTRUCTIONS |
| Green | Safe Load | Continue Operation |
| Red | Overload | Do Not Continue Operation |

4.4.8 Load Limit Warning Handle Operation

- Operate the hoist by holding the middle of the lever grip.
- The following three (3) signals occur to warn of an excessive load. Refer to Figure 4-2.
 - The lever grip **DEFLECTS**.
 - The lever **CLICKS**.
 - The signal window changes from **GREEN** to **RED**.
- Stop lifting and lowering immediately when an overload is detected.
- Reset the grip into its straight position (back in place) before continuing to operate the hoist.

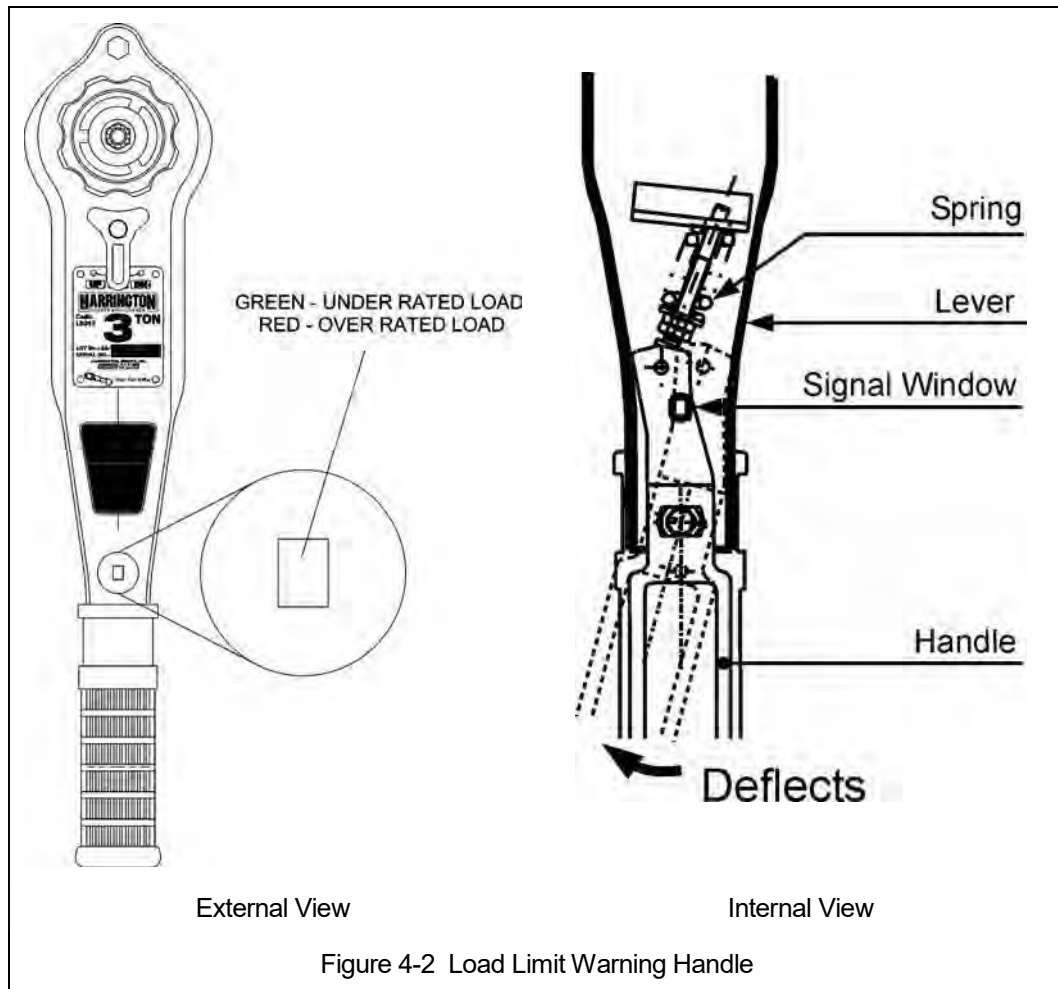

4.5 Slip Clutch Option

4.5.1 Slip Clutch Operation

- The L5 Lever Hoist with Slip Clutch is identified as is shown in Figure 4-3.
- The L5 Lever Hoist with Slip Clutch is designed and manufactured to warn an operator of a dangerous overload while preventing damage to the hoist.
- A greater than rated load will activate the Slip Clutch. This will cause the lever operation to slip preventing damage to the product.



Figure 4-3 Slip Clutch Identifier Label

- If the Slip Clutch is activated, immediately stop the lifting operation and ensure that the lever hoist is in a no load state.
- Follow the Owner's Manual to operate the lever hoist in a normal manner.

4.5.2 Slip Clutch Operation Precautions

- **⚠ WARNING** Do not lift more than the rated load.
- **⚠ WARNING** When the Slip Clutch is activated, stop operating the hoist immediately. Failure to follow this instruction may cause injury or damage to the product. Reduce the load to less than the rated load. Warn all the surrounding people until the Slip Clutch is released.
- **⚠ WARNING** Do not use the hoist in a manner that frequently or repeatedly activates the Slip Clutch.
- **⚠ WARNING** Do not disassemble the lever hoist or change the Slip Clutch setting.
- **⚠ WARNING** Operating the lever hoist in an unsafe manner may cause the Slip Clutch to work improperly.
- **⚠ CAUTION** Using the lever hoist for a long period in an atmosphere of high oil content may cause the Slip Clutch to activate with less than the rated load.
- **⚠ CAUTION** If the Slip Clutch is activated with the rated load, contact the factory.

4.5.3 Slip Clutch Inspection and Maintenance

- Frequent Inspection - Follow the procedure listed in the L5LB Owner's Manual.
- Periodic Inspection and Hoist Disassembly – Consult factory before performing any inspections or repairs involving disassembly and re-assembly of the hoist.

5.0 Inspection

5.1 General

- 5.1.1 The inspection procedure herein is based on ANSI/ASME B30.21. The following definitions are from ANSI/ASME B30.21 and pertain to the inspection procedure below.
- **Personnel Competence** – Persons performing the functions identified in this volume shall meet the applicable qualifying criteria stated in this volume and shall through education, training, experience, skill, and physical fitness, as necessary, be competent and capable to perform the functions as determined by the employer or employer’s representative.
 - **Qualified Person** – a person who, by possession of a recognized degree or certificate of professional standing, or who, by extensive knowledge, training, and experience, has successfully demonstrated the ability to solve or resolve problems relating to the subject matter and work.
 - **Normal Service** – that distributed service which involves operation with randomly distributed loads within the rated load limit, or uniform loads less than 65% of rated load for not more than 15% of the time.
 - **Heavy Service** – that service which involves operation within the rated load limit which exceeds normal service.
 - **Severe Service** – that service which involves normal or heavy service with abnormal operating conditions.

5.2 Inspection Classification

- 5.2.1 Inspection Classification – the inspection procedure for hoists in regular service is divided into three general classifications based upon the intervals at which inspection is to be performed. The intervals in turn are dependent upon the nature of the critical components of the hoist and the degree of their exposure to wear, deterioration, or malfunction. The three general classifications are herein designated as PREOPERATIONAL, FREQUENT and PERIODIC, with respective intervals between inspections as defined below.
- 5.2.2 Initial Inspection – prior to initial use, all new, altered, or modified hoists shall be inspected per the Frequent Inspection criteria in Table 5-2.
- 5.2.3 PREOPERATIONAL Inspection – Visual inspection performed before the first use of each shift with records not required.
- 5.2.4 FREQUENT Inspection – visual examinations by the operator or other designated personnel with intervals per the following criteria:
- Normal service – monthly
 - Heavy service – weekly to monthly
 - Severe service – daily to weekly
 - Special or infrequent service – as recommended by a qualified person before and after each occurrence.
- 5.2.5 PERIODIC Inspection – visual inspection by a designated person with intervals per the following criteria:
- Normal service – yearly
 - Heavy service – semiannually
 - Severe service – quarterly
 - Special or infrequent service – as recommended by a qualified person before the first such occurrence and as directed by the qualified person for any subsequent occurrences.

5.3 Preoperational Inspection

5.3.1 Visual inspections shall be made before the first use of each shift with records not required.

| Table 5-1 Preoperational Inspection |
|--|
| All functional operating mechanisms for proper operation and adjustment, maladjustment and unusual sounds. |
| Hooks and latches in accordance with ANSI/ASME B30.10, Frequent Inspection (paras. 10-1.10.3 and 10-2.10.3). |
| Load chain in accordance with Section 5.7 |
| Over-travel restraint for proper attachment. |
| Hoist body and lever for deformation, cracks and /or other damage. |
| Hoist support or trolley, if used, for damage. |

5.4 Frequent Inspection

5.4.1 Inspections shall be made on a FREQUENT basis in accordance with Table 5-2, "Frequent Inspection." Included in these FREQUENT Inspections are observations made during operation for any defects or damage that might appear between Periodic Inspections. Evaluation and resolution of the results of FREQUENT Inspections shall be made by a designated person such that the hoist is maintained in safe working condition.

| Table 5-2 Frequent Inspection |
|--|
| All functional operating mechanisms for proper operation and adjustment, maladjustment and unusual sounds. |
| Hoist braking system for proper operation |
| Hooks and latches in accordance with ANSI/ASME B30.10, Frequent Inspection (paras. 10-1.10.3 and 10-2.10.3). |
| Load chain in accordance with Section 5.7 |
| Load chain reeving for compliance with Section 3.1 and 6.4 |
| Hoist body and lever for deformation, cracks, and/or other damage |
| Hoist support or trolley, if used, for damage |

5.5 Periodic Inspection

5.5.1 Inspections shall be made on a PERIODIC basis in accordance with Table 5-3, "Periodic Inspection." Evaluation and resolution of the results of PERIODIC Inspections shall be made by a designated person such that the hoist is maintained in safe working condition.

5.5.2 For inspections where load suspension parts of the hoist are disassembled, a load test per ANSI/ASME B30.21 must be performed on the hoist after it is re-assembled and prior to its return to service.

| Table 5-3 Periodic Inspection |
|---|
| Requirements of Frequent Inspection. |
| Hooks and latches in accordance with ANSI/ASME B30.10, Periodic Inspection (paras. 10-1.10.4 and 10-2.10.4). |
| Evidence of loose bolts, nuts, or rivets. |
| Evidence of worn, corroded, cracked, or distorted parts such as load blocks, suspension housing, chain attachments, clevises, yokes, suspension bolts, shafts, gears, bearings, pins, rollers and locking and clamping devices. |
| Evidence of damage to hook retaining nuts or collars and pins, and welds or rivets used to secure the retaining members. |
| Evidence of damage or excessive wear of load and idler sheaves. |
| Evidence of worn, glazed or oil contaminated friction disks; worn pawls, cams or ratchet; corroded, stretched, or broken pawl springs in brake mechanism. |
| Evidence of damage to supporting structure or trolley, if used, for damage |
| Function label on hoist for legibility. |
| Warning label properly attached to the hoist and legible (see Section 1.2). |
| End connections of load chain stopper link. |
| Evidence of missing hoist and hoist mounting items. |

5.6 Occasionally Used Hoists

5.6.1 Hoists that are used infrequently shall be inspected as follows prior to placing in service:

- Hoist Idle More Than 1 Month, Less Than 1 Year: Inspect per FREQUENT Inspection criteria in Section 5.4.
- Hoist Idle More Than 1 Year: Inspect per PERIODIC Inspection criteria in Section 5.5., or as determined by a qualified person.

5.7 Inspection Records

5.7.1 Conditions found during Periodic Inspections shall be documented to provide the basis for a continuing evaluation. An external coded mark on the hoist is an acceptable identification in lieu of records. (A metal stamp mark shall not be made in a highly stressed area).

5.7.2 A long range chain inspection program should be established and should include records of examination of chains removed from service so a relationship can be established between visual observation and actual condition of the chain.

5.8 Inspection Methods and Criteria

5.8.1 This section covers the inspection of specific items. The list of items in this section is based on those listed in ANSI/ASME B30.21 for the Frequent and Periodic Inspection.

5.8.2 Frequent Inspection - Not intended to involve disassembly of the hoist. Disassembly for further inspection would be required only if frequent inspection results so indicate. Disassembly and further inspection should only be performed by a qualified person trained in the disassembly and re-assembly of the hoist.

5.8.3 Periodic Inspection - Disassembly of the hoist is required. Disassembly should only be performed by a qualified person trained in the disassembly and re-assembly of the hoist.

Table 5-4 Hoist Inspection Methods and Criteria

| Item | Method | Criteria | Action |
|---------------------------------------|------------------|--|--|
| Functional operating mechanisms. | Visual, Auditory | Mechanisms should be properly adjusted and should not produce unusual sounds when operated. Components should not be deformed, scarred or show significant wear. Refer to Figures 5-1 and 5-2. | Repair or replace as required. |
| Braking System – Components | Visual | Brake Pawl, Pawl Shaft and Pawl Spring should not be deformed, scarred or show significant wear. Refer to Figures 5-1 and 5-3. | Replace |
| Braking System – Friction Plate | Visual, Measure | The surface of the friction plate should be free of grease, oil, scars, gouges and wear and have uniform thickness. The outer thickness should not be thinner than the inner thickness. The thickness should not be less than the discard value listed in Table 5-5. | Replace |
| Braking System – Friction Disc | Visual | The surface of the friction plate should be free of scars, gouges and wear. | Replace |
| Braking System – Bushing | Measure | The bushing should have uniform thickness. The “A” dimension should not be less than the discard value listed in Table 5-6. | Replace |
| Braking System – Bushing | Visual | When slightly heated, the bushing should be so lubricated that lubricant oozes off the surface. | Soak bushing in machine oil for one day. |
| Braking System – Ratchet Disc | Measure | The “D” dimension should not be less than the discard value listed in Table 5-7. | Replace |
| Lifting System – Components | Visual | Components should not be deformed, scarred or show significant wear. Refer to Figure 5-4. | Replace |
| Lifting System – Selector Pawl Spring | Measure | The “L” dimension should not be less than the listed in Table 5-8. | Replace |
| Lifting System – Brake Spring | Measure | The “L” dimension should not be less than the listed in Table 5-9. The “A” angle degree should not be greater than the discard value listed in Table 5-9. | Replace |
| Lifting System – Free Chain Spring | Measure | The “L” dimension should not be less than the discard value listed in Table 5-10. The “A” angle degree should not be less than the discard value listed in Table 5-10. | Replace |
| Hooks - Surface Condition | Visual | Should be free of gouges, deep nicks, dents, weld splatter and significant corrosion. | Replace. |
| Hooks - Fretting wear | Measure | The “u” and “t” dimensions should not be less than discard value listed in Table 5-11. | Replace. |
| Hooks - Stretch | Measure | The “k” dimension should not be greater than 1.05 times that measured and recorded at the time of purchase (See Section 3.4). If recorded “k” values are not available for hooks when new, use nominal “k” values from Table 5-11. | Replace. |
| Hooks - Deformation | Visual | Should be free of twists and deformations. See Figure 5-5. | Replace |

| Table 5-4 Hoist Inspection Methods and Criteria | | | |
|--|------------------|--|--|
| Item | Method | Criteria | Action |
| Hooks - Bent Shank or Neck | Visual | Shank and neck portions of hook should be free of deformations. | Replace. |
| Hooks - Swivel | Visual, Function | Bearing parts and surfaces should not show significant wear, and should be free of dirt, grime and deformations. Hook should rotate freely with no roughness. See Figure 5-5. | Clean/lubricate, or replace as required. |
| Hooks - Idle Sheave and Shaft (Multiple Fall Hoist) | Visual, Function | Pockets of Idle Sheave should be free of significant wear. Idle Sheave surfaces should be free of nicks, gouges, dirt and grime. Bearing parts and surfaces of Idle Sheave and Axle should not show significant wear. Idle Sheave should rotate freely with no roughness or significant free play. | Clean/lubricate, or replace as required. |
| Hooks - Hook Latches | Visual, Function | Latch should not be deformed. Attachment of latch to hook should not be loose. Latch spring should not be missing and should not be weak. Latch movement should not be stiff - when depressed and released latch should snap smartly to its closed position. | Replace. |
| Hooks - Yoke Assembly | Visual | Should be free of significant rust, weld splatter, nicks, gouges. Holes should not be elongated, fasteners should not be loose, and there should be no gap between mating parts. | Tighten or replace as required. |
| Top Pin – Deformation | Visual, Measure | The pin should be free of scars or significant deformation. The "d" dimension should not be less than discard value listed in Table 5-12. | Replace |
| Yoke – Top Pin Hole Deformation | Visual, Measure | The "d" dimension of the top pin hole should not be greater than the discard value listed in Table 5-13. | Replace Hook Set |
| Yoke – Chain Pin Hole Deformation | Measure | The "d" dimension of the chain pin hole should not be greater than the discard value listed in Table 5-13. | Replace Hook Set or yoke. |
| Load Chain - Surface Condition | Visual | Should be free of gouges, nicks, dents, weld splatter and corrosion. Links should not be deformed, and should not show signs of abrasion. Surfaces where links bear on one another should be free of significant wear. | Replace. |
| Load Chain - Pitch and Wire Diameter | Measure | The "P" dimension should not be greater than discard value listed in Table 5-14. The "d" dimension should not be less than discard value listed in Table 5-14. | Replace. Inspect Load Sheave (and Idle Sheave for multiple fall hoists). |
| Load Chain - Lubrication | Visual, Auditory | Entire surface of each chain link should be coated with lubricant and should be free of dirt and grime. Chain should not emit cracking noise when hoisting a load. | Clean/lubricate (see Section 6.0). |
| Load Chain - Reeving | Visual | Chain should be reeved properly through Load Sheave. Refer to Section 6.4. On multiple fall hoists chain should be installed properly and free of twists. Refer to Section 3.1. | Reeve/Install chain properly. |

Table 5-4 Hoist Inspection Methods and Criteria

| Item | Method | Criteria | Action |
|-----------------------------------|--------------------------------|--|---------------------------------|
| Chain Pin - Deformation | Visual, Measure | The pin should be free of scars or significant deformation. The "d" dimension should not be less than discard value listed in Table 5-15. | Replace |
| Housing and Mechanical Components | Visual, Auditory, Function | Hoist components including load blocks, suspension housing, chain attachments, clevises, yokes, suspension bolts, shafts, gears, bearings, pins and rollers should be free of cracks, distortion, significant wear and corrosion. Evidence of same can be detected visually or via detection of unusual sounds during operation. | Replace. |
| Bolts, Nuts and Rivets | Visual, Check with Proper Tool | Bolts, nuts and rivets should not be loose, deformed or corroded. | Tighten or replace as required. |
| Load Sheave | Visual | Pockets of Load Sheave should be clean and free of significant wear. | Replace. |
| Warning Labels | Visual | Warning Labels should be affixed to the hoist (see Section 1.2) and they should be legible. | Replace. |
| Hoist Capacity Label | Visual | The label that indicates the capacity of the hoist should be legible and securely attached to the hoist. | Replace. |

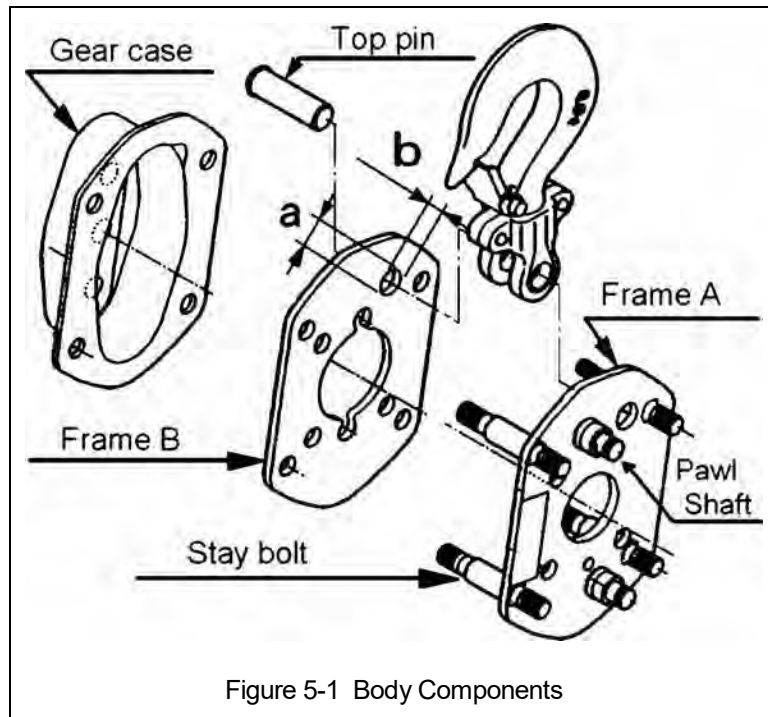


Figure 5-1 Body Components

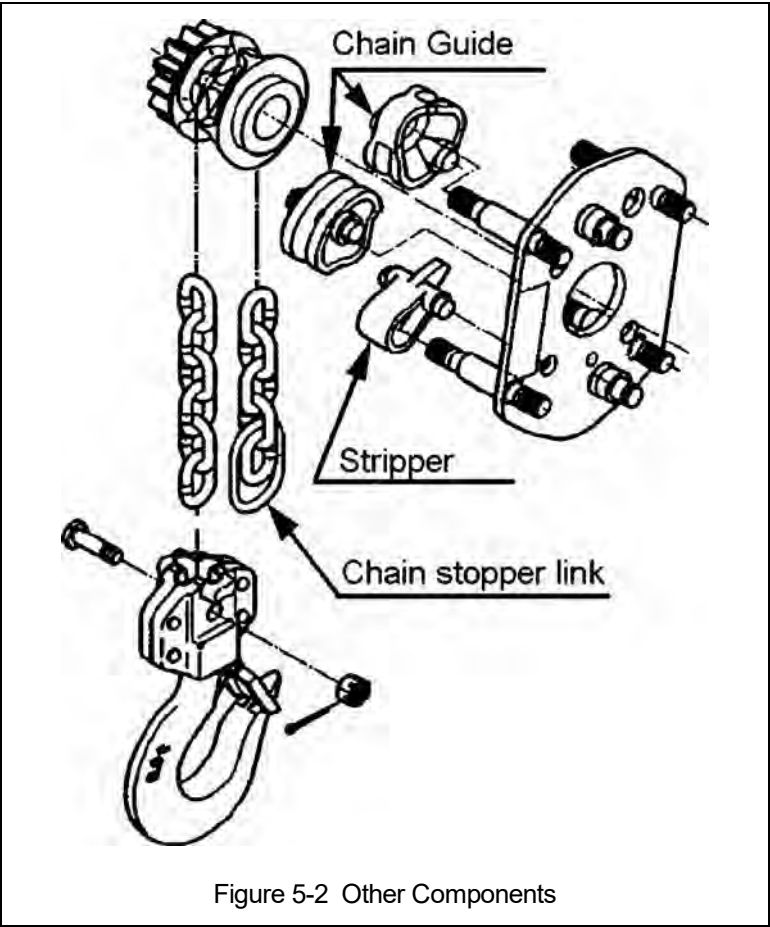


Figure 5-2 Other Components

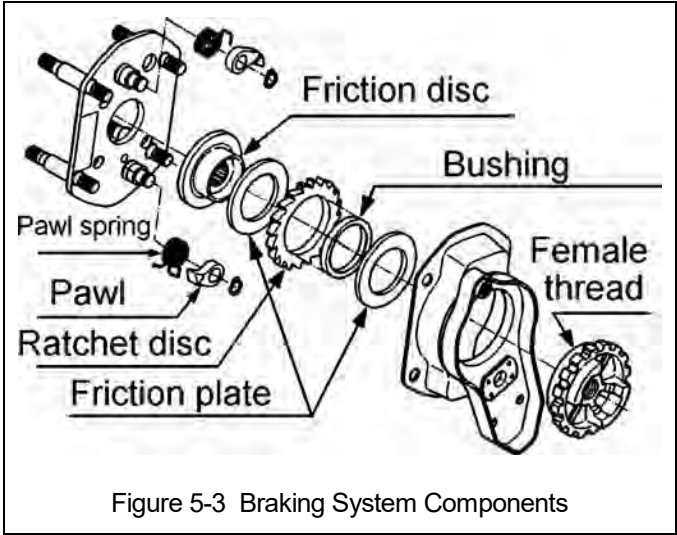
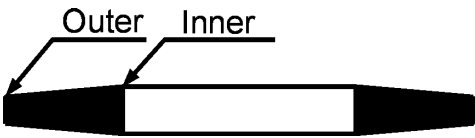
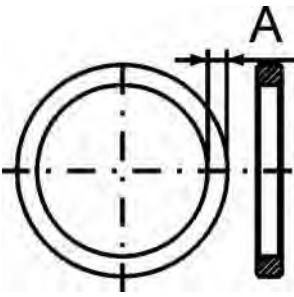
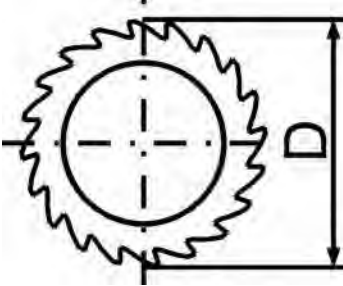


Figure 5-3 Braking System Components

| Table 5-5 Friction Plate Wear Dimensions | | |
|---|------------------------|------------|
|  | | |
| Product Code | Thickness inch (mm) | |
| | Standard | Discard |
| All | 0.14 (3.5) | 0.12 (3.0) |

| Table 5-6 Brake Bushing Wear Dimensions | | |
|---|--------------------------|------------|
|  | | |
| Product Code | A Dimension inch (mm) | |
| | Standard | Discard |
| All | 0.16 (4.0) | 0.12 (3.0) |

| Table 5-7 Brake Ratchet Disc Wear Dimensions | | |
|---|--------------------------|-----------|
|  | | |
| Product Code | D Dimension inch (mm) | |
| | Standard | Discard |
| LB008, LB010, LB015, LB020, LB028 | 2.52 (64) | 2.40 (61) |
| LB030, LB060, LB090 | 2.91 (74) | 2.79 (71) |

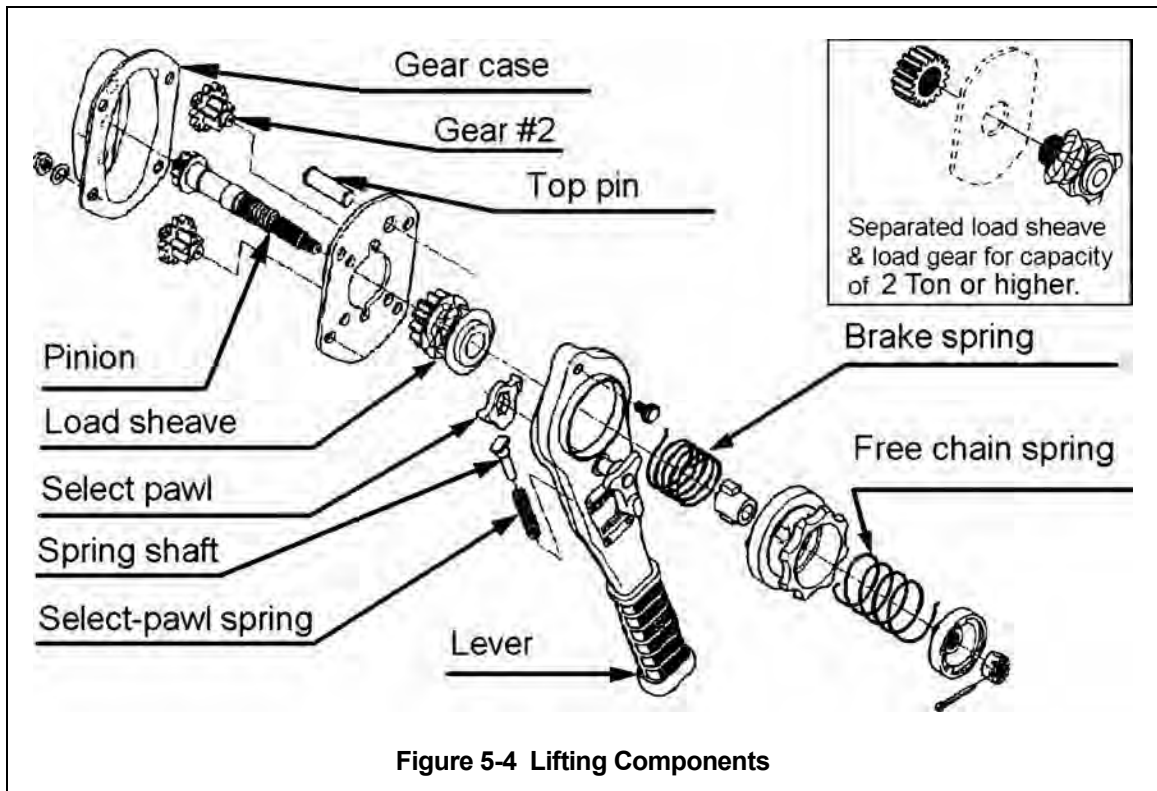
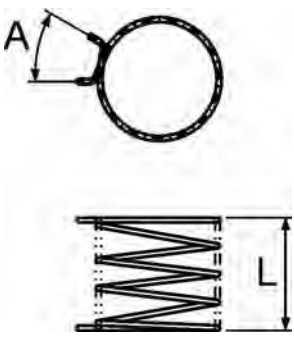


Figure 5-4 Lifting Components

| Table 5-8 Selector Pawl Spring Length Dimension | |
|---|--------------------------|
| | |
| Product Code | L Dimension inch (mm) |
| | Standard |
| LB008, LB010, LB015, LB020, LB028 | 1.46 (37) |
| LB030, LB060, LB090 | 1.65 (42) |

| Table 5-9 Lifting Brake Spring Dimensions | | | | | |
|---|-----------------------------------|-------------------------|---------|-----------------------|---------|
|  | | | | | |
| | Product Code | L Dimension Inches (mm) | | A Dimension (degrees) | |
| | | Standard | Discard | Standard | Discard |
| Non Slip Clutch | LB008, LB010, LB015, LB020, LB028 | 1.18 (30) | | 30° | 45° |
| | LB030, LB060, LB090 | | | 25° | 40° |
| With Slip Clutch | LB008, LB010, LB015, LB020, LB028 | 1.18 (30) | | 30° | 45° |
| | LB030, LB060, LB090 | | | 0.98 (25) | 25° |



| Table 5-10 Free Chain Spring Dimensions | | | | | |
|---|-----------------------------------|-------------------------|-----------|-----------------------|---------|
|  | | | | | |
| | Product Code | L Dimension Inches (mm) | | A Dimension (degrees) | |
| | | Standard | Discard | Standard | Discard |
| Non Slip Clutch | LB008, LB010, LB015, LB020, LB028 | 2.60 (66) | 2.32 (59) | 180° | 165° |
| | LB030, LB060, LB090 | 2.80 (71) | 2.52 (64) | | |
| With Slip Clutch | LB008, LB010, LB015, LB020, LB028 | 2.64 (67) | 2.36 (60) | 145° | 160° |
| | LB030, LB060, LB090 | 2.95 (75) | 2.68 (68) | 110° | 125° |

Table 5-11 Top Hook & Bottom Hook Dimensions

"k" Measured When New:


Top: _____


Bottom: _____

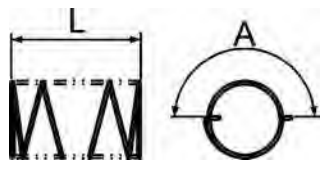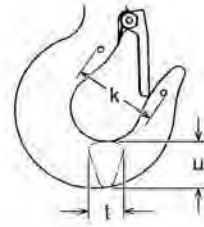

| Product Code | Nominal "k" Dimension* inch (mm) | "u" Dimension inch (mm) | | "t" Dimension inch (mm) | |
|--------------|----------------------------------|-------------------------|-------------|-------------------------|-------------|
| | | Standard | Discard | Standard | Discard |
| LB008 | 1.73 (44) | 0.77 (19.6) | 0.73 (18.6) | 0.55 (14.0) | 0.52 (13.3) |
| LB010 | 2.05 (52) | 0.83 (21.0) | 0.79 (20.0) | 0.59 (15.0) | 0.56 (14.3) |
| LB015 | 2.17 (55) | 1.01 (25.7) | 0.96 (24.4) | 0.75 (19.0) | 0.71 (18.1) |
| LB015-SYH | 2.17 (55) | 1.06 (27) | 1.01 (25.7) | 0.91 (23) | .86 (21.9) |
| LB020 | 2.48 (63) | 1.14 (29.0) | 1.09 (27.6) | 0.83 (21.0) | 0.79 (20.0) |
| LB028 | 2.48 (63) | 1.14 (29.0) | 1.09 (27.6) | 0.83 (21.0) | 0.79 (20.0) |
| LB028-SYH | 2.52 (64) | 1.26 (32) | 1.13 (30.4) | 0.98 (25) | 0.94 (23.8) |
| LB030 | 2.64 (67) | 1.22 (31.0) | 1.16 (29.5) | 0.96 (24.5) | 0.92 (23.3) |
| LB030-SYH | 2.72 (69) | 1.42 (36) | 1.35 (34.2) | 1.10 (28) | 1.05 (26.6) |
| LB060 | 3.54 (90) | 1.61 (41.0) | 1.54 (39.0) | 1.34 (34.0) | 1.27 (32.3) |
| LB090 | 4.37 (111) | 2.05 (52.0) | 1.95 (49.4) | 1.63 (41.5) | 1.55 (39.4) |

* These values are nominal since the dimension is not controlled to a tolerance. The "k" dimension should be measured when the hook is new - this becomes a reference measurement. Subsequent measurements are compared to this reference to make determinations about hook deformation/stretch. See Section 5.7, "Hooks - Stretch".

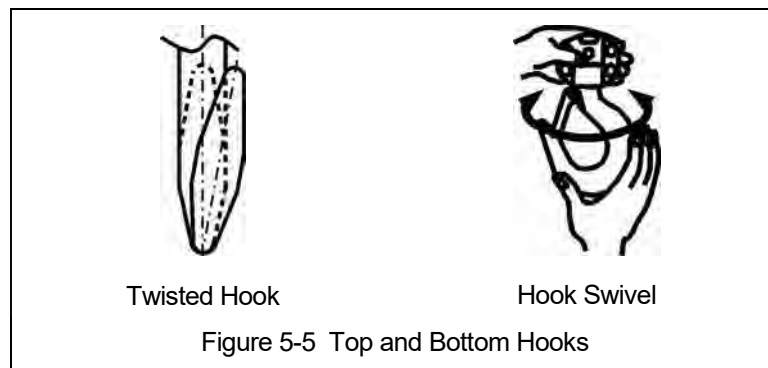
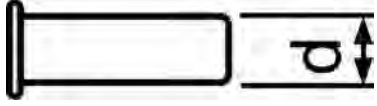
| Table 5-12 Body Top Pin Wear Dimensions | | |
|---|--------------------------|-------------|
|  | | |
| Product Code | d Dimension inch (mm) | |
| | Standard | Discard |
| LB008, LB010 LB015 | 0.47 (12) | 0.45 (11.4) |
| LB020, LB028 | 0.55 (14) | 0.52 (13.3) |
| LB030, LB060, LB090 | 0.63 (16) | 0.60 (15.2) |




| Table 5-13 Chain Pin Hole and Top Pin Hole Wear Dimensions | | | | |
|--|-----------------------------|-------------|----------------------|-------------|
|  | | | | |
| Product Code | Hole Diameter (d) | | | |
| | Chain Pin Hole inch (mm) | | Top Pin inch (mm) | |
| | Standard | Discard | Standard | Discard |
| LB008, LB010 | 0.28 (7.1) | 0.30 (7.6) | 0.48 (12.2) | 0.50 (12.7) |
| LB015 | 0.35 (8.9) | 0.37 (9.4) | 0.48 (12.2) | 0.50 (12.7) |
| LB020, LB028 | 0.43 (11.0) | 0.45 (11.5) | 0.56 (14.2) | 0.58 (14.7) |
| LB030 | 0.48 (12.3) | 0.50 (12.8) | 0.64 (16.2) | 0.66 (16.7) |
| LB060, LB090 | 0.48 (12.3) | 0.50 (12.8) | 0.65 (16.4) | 0.67 (16.9) |

Table 5-14 Chain Wear Dimensions



| Product Code | "P" Dimension inch (mm) | | "d" Dimension inch (mm) | |
|---------------------|----------------------------|--------------|----------------------------|------------|
| | Standard | Discard | Standard | Discard |
| LB008, LB010 | 3.11 (79.0) | 3.20 (81.3) | 0.22 (5.6) | 0.20 (5.1) |
| LB015 | 3.94 (100.0) | 4.05 (102.9) | 0.28 (7.1) | 0.25 (6.4) |
| LB020, LB028 | 4.88 (124.0) | 5.02 (127.6) | 0.35 (8.8) | 0.31 (7.9) |
| LB030, LB060, LB090 | 5.55 (141.0) | 5.71 (145.1) | 0.39 (10.0) | 0.35 (9.0) |

Table 5-15 Chain Pin Wear Dimensions

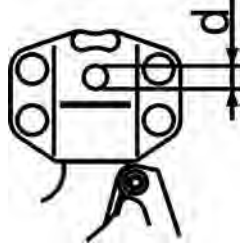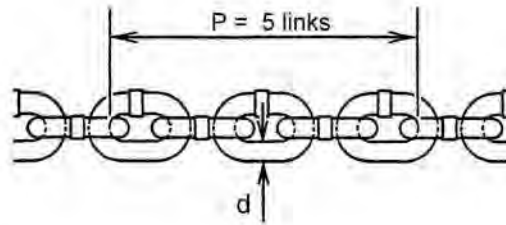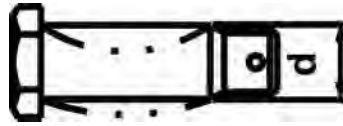

| Product Code | "d" Dimension inch (mm) | |
|---------------------|----------------------------|-------------|
| | Standard | Discard |
| LB008, LB010 | 0.27 (6.8) | 0.26 (6.5) |
| LB015 | 0.34 (8.7) | 0.33 (8.3) |
| LB020, LB028 | 0.43 (10.8) | 0.41 (10.3) |
| LB030, LB060, LB090 | 0.48 (12.1) | 0.45 (11.5) |

6.0 Maintenance and Handling

6.1 Lubrication

6.1.1 Load Chain

- **CAUTION** Model L4 and Model L5 chain is not interchangeable.
- For longer life, the load chain should be lubricated.
- The load chain lubrication should be accomplished after cleaning the load chain with an acid free cleaning solution.
- Apply Harrington lubricating grease (Part No. ER2CS1951) or an equivalent to industrial general lithium grease, NLGI No. 0, to the bearing surfaces of the load chain links as indicated by the shaded areas in Figure 6-1. Also apply the grease to the areas of the load chain (shaded areas in Figure 6-1) that contact the load sheave. Insure that the grease is applied to the contact areas in the load sheave pockets.
- Machine or gear oil (grade ISO VG 46 or 68 oil or equivalent) may be used as an alternative lubricant but must be applied more frequently.

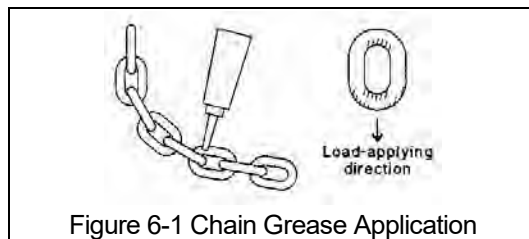


Figure 6-1 Chain Grease Application

- The chain should be lubricated every 3 months (more frequently for heavier usage or severe conditions).
- For dusty environments, it is acceptable to substitute a dry lubricant.

6.1.2 Hooks and Suspension Components:

- Hooks – Bearings should be cleaned and lubricated at least once per year for normal usage. Clean and lubricate more frequently for heavier usage or severe conditions.
- Hook Yokes and Latches – Lubricate the hook yokes and hook latches at least twice per year for normal usage; more frequently for heavier usage or severe conditions.
- Suspension Pins - Lubricate the chain pin and the top pin at least twice per year for normal usage; more frequently for heavier usage or severe conditions.

6.2 Disassembly, Assembly and Adjustment

6.2.1 **NOTICE**

- 1) Perform proper disassembly or assembly in accordance with this manual.
- 2) The hoist utilizes dry friction plates; they are not to be lubricated.
- 3) Do not extend the load chain.
- 4) Remove old grease on the disassembled parts.
- 5) Replace components with Harrington Hoist approved parts.
- 6) To reassemble, apply new grease, and use a new split pin and snap ring.

Note: The following symbols in this manual indicate the recommended lubricants.

G1: NLGI No. 2

G2: Turbine Oil

G3: NLGI No. 1

6.2.2 Tools – The following tools are required to disassemble/reassemble the hoist.

| Table 6-1 Tools Required for Hoist Disassembly | | |
|---|---------------------------------|------------------------|
| No. | Tool | Operation |
| 1 | Snap ring pliers | Opening a snap ring |
| 2 | Socket wrenches: 12, 14 mm | Slotted nuts |
| 3 | Hex keys: 4, 5, 10, 12 mm | Socket head cap screws |
| 4 | Wrenches: 10, 12, 13, 14, 17 mm | Bolts and nuts |
| 5 | Phillips screwdriver | Machine screws |
| 6 | Pliers | Split pins |
| 7 | Soft-face (plastic) hammer | |

6.3 Hoist Disassembly

Proceed as follows:

6.3.1 Free Chain Knob

- 1) Pull out (50) Split Pin and remove (49) Slotted Nut.
- 2) Remove (48) Spring Holder, (47) Free Chain Spring, (45) Free Chain Knob assembly, (43) Brake Spring and (44) Cam Guide from (16) Pinion.

6.3.2 Lever

- 1) Remove (31) Acorn nuts and (32) Spring Lock Washers, which attaches (29) Brake Cover assembly to (10) Frame A assembly.
- 2) While holding (37) Lever assembly horizontally by hand, turn (33) Female Thread counterclockwise and remove the lever assembly (29) Brake Cover assembly from the hoist.
- 3) Remove (42) Hex Cap Screw and (30) Flange Nut, and separate (37) Lever assembly and (29) Brake cover assembly.
- 4) Remove (33) Female Thread from (29) Brake cover assembly.
- 5) Remove (34) Select Pawl, (35) Spring Shaft and (36) Selector-Pawl Spring from (37) Lever assembly.

6.3.3 Brake

- 1) Remove the parts from (16) Pinion in the following order, (26) Friction Plate (one piece), (27) Ratchet Disc, (28) Bushing, (26) Friction Plate (1 piece) and (25) Friction Disc.
- 2) Remove (24) Snap Ring from the pawl shaft with snap ring pliers, and remove (22) Pawl and (23) Pawl spring.

6.3.4 Gears

- 1) Remove (14) Acorn Nut and (15) Spring Lock Washer, and detach (13) Gear Case assembly.

- 2) Remove (17) Gear #2 and (16) Pinion. On LB028 to LB090 hoists remove (18) Load Gear.
- 3) Pull out (3) Top Pin and remove (1) Top Hook set.

6.3.5 Load Chain

- 1) Remove (12) Frame B, (20) Chain Guide and (21) Stripper.
- 2) Remove (52) Load chain and (19) Load Sheave.
- 3) For LB008 to LB030 hoists remove (9) Split Pin, (8) Slotted Nut and (7) Chain Pin from (4) Bottom Hook Set, and remove (52) Load chain.
- 4) For LB060 and LB090 hoists remove (23) Split Pin, (22) Slotted Nut and (21) Chain Pin from (10) Bottom or (1) Top Hook Set. Remove (15) Lever Nuts and (14) Bolts from (13) Bottom or (4) Top Yoke Assembly then remove (7) and (15) Idle Sheave(s).

6.4 Hoist Assembly


6.4.1 **⚠ WARNING**

- Inspect and replace any worn or damaged parts per Table 5-3.
- Secure all nuts, bolts and split pins firmly.
- Replace all split pins and retaining rings.

6.4.2 Lever

Refer to Figure 6-1, proceed as follows:


- 1) Set the Selector Lever on the (37) lever assembly to the 'N' position.
- 2) With the Selector Lever pulled in the 'a' direction, as shown in the left picture, insert the hex part of the Selector Lever into (34) Select pawl.
- 3) Apply (G1) grease lightly to the pawl of (34) Select Pawl and to the top of (35) Spring Shaft as shown in Figure 6-1.
- 4) Insert (35) Spring Shaft into (36) Select-Pawl spring and attach them into the Spring Holder.

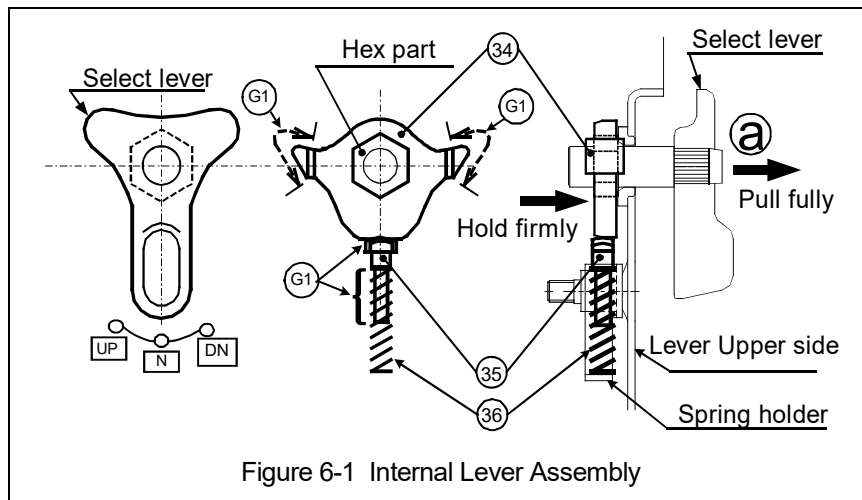

Refer to Figure 6-2, proceed as follows.


- 1) **⚠ WARNING** Do not apply oil to the friction side of the Female Thread.

- 2) **⚠ CAUTION** Clean the friction side of the Female Thread.
- 3) Apply (G3) grease lightly to the thread of (33) Female Thread.
- 4) Place (33) Female Thread, friction side first into the (29) Brake Cover assembly.
- 5) Install (37) Lever assembly onto (29) Brake Cover Assembly and secure with (42) Hex Cap Screw and (30) Flange Nuts.

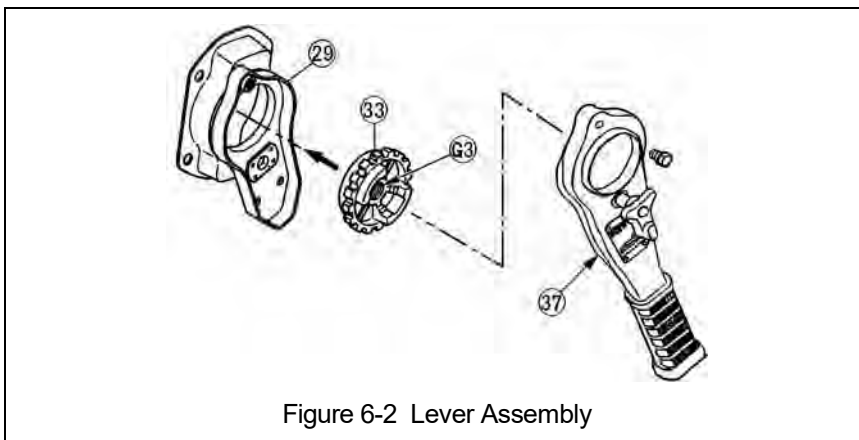

6.4.3 Lever Grip

- 1) **⚠ CAUTION** Read ALL instructions below BEFORE applying glue.
- 2) Remove dirt, water, oil and rust from the area of the Lever where the glue will be applied for the new grip. Note: Glue is included with the replacement Lever Grip.
- 3) Make a quick and even application of the glue on the four sides of the Lever as shown in Figure 6-3. (38) Grip must be installed within 10 seconds after applying the glue to the Lever.

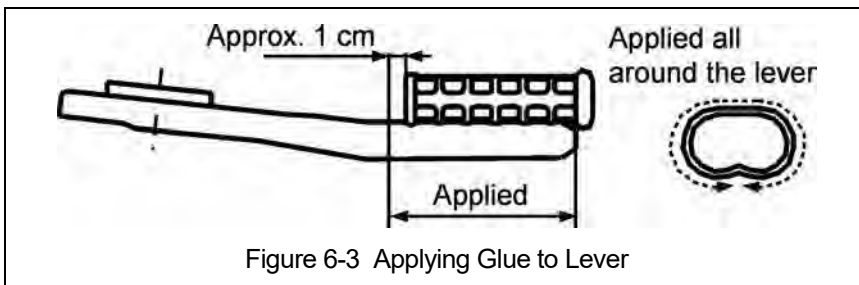

- 4) Refer to Figure 6-4 and place (38) Grip on Lever with its inside boss aligned with the boss hole in the Lever. Make sure boss of (38) Grip is completely seated into the boss hole of the lever.
- 5) Firmly install (39) Binding Screw through the Grip and Lever Assembly.

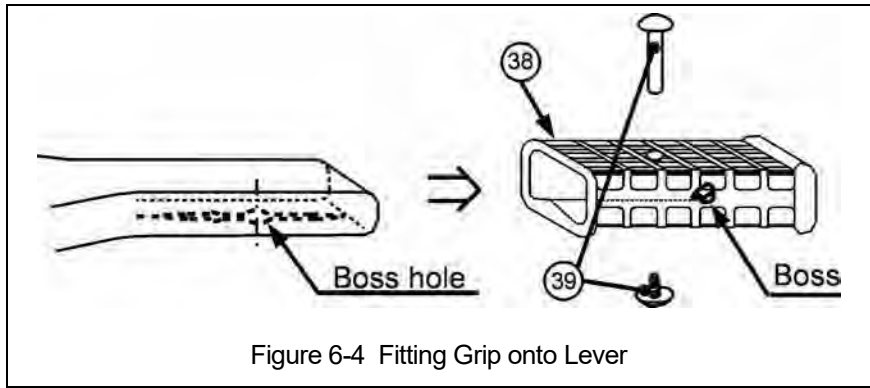


Figure 6-4 Fitting Grip onto Lever

6.4.4 Load Sheave and Chain Assembly

- 1) For LB008 to LB030 hoists attach (4) Bottom Hook set to (52) Load chain with (8) Slotted Nut and (7) Split Pin.
- 2) For LB060 and LB090 hoists apply (G1) grease the bearing surface of the (17) Shaft Assembly and (16) (17) Idle Sheave. Install the shaft and sheave into the (13) Bottom or (4) Top Yoke assembly and secure the yokes with (14) bolts and (15) Lever Nuts.
- 3) Apply (G3) grease to the inner parts of the bearing hole of (10) Frame A Assembly and (19) Load Sheave as shown in Figure 6-5.
- 4) Attach (19) Load Sheave to (10) Frame A Assembly on Stay Bolt side with the gear or spline oriented as shown in Figure 6-5.



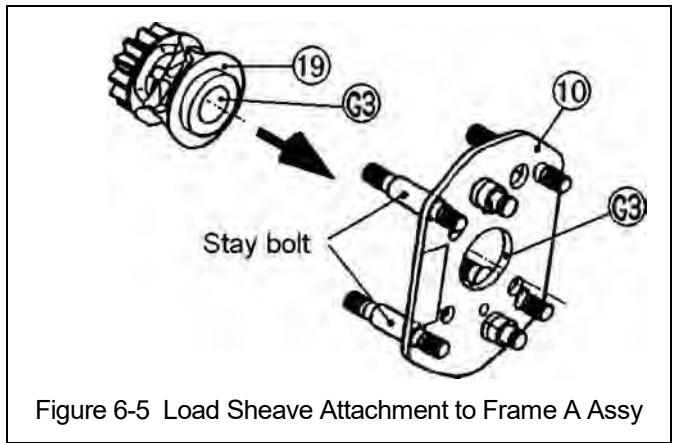


Figure 6-5 Load Sheave Attachment to Frame A Assy

- 5) Place the (52) Load chain on (19) Load Sheave and install (20) Chain Guides and (21) Stripper. Refer to Figure 6-6.
- 6) **CAUTION** Orient the load chain with the (53) Chain stopper link parallel to the frame and welds to the outside of the Load Sheave.

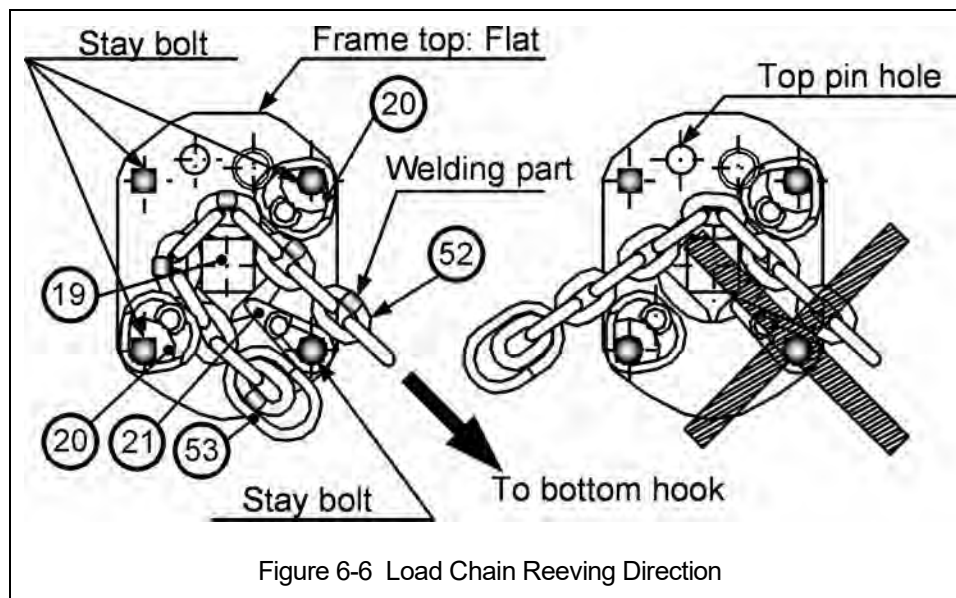

- 7)** Apply (G3) grease to the bearing part of (12) Frame B. Refer to Figure 6-7.
- 8)** Install (12) Frame B onto (10) Frame A Stay Bolts. Make sure to align the top flat parts of the both frames.

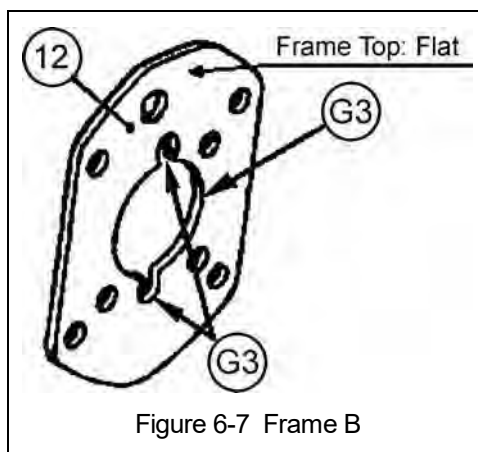

6.4.5 Top Hook

- Install the (1) Top hook set between (10) Frame A assembly and (12) Frame B then Insert (3) Top pin from the side of (12) Frame B to fasten (1) Top hook set. Refer to Figure 6-8.

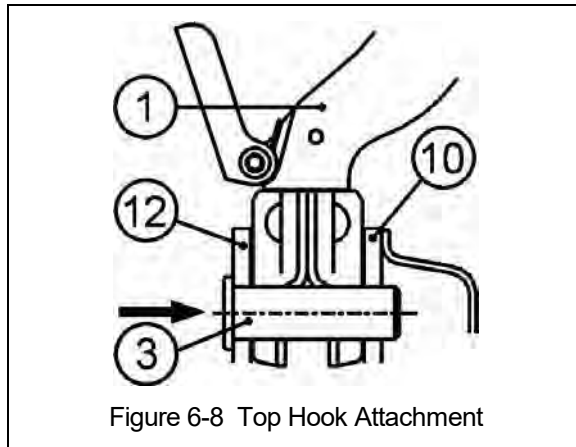


Figure 6-8 Top Hook Attachment

6.4.6 Gears

- 1) For LB020 to LB090 hoists, attach (18) Load Gear to the serrated part of (19) Load Sheave. If necessary use a plastic or rubber hammer to make the load gear is fully seated on the Load Sheave.
- 2) Insert (16) Pinion into (19) Load Sheave and install (17) Gear #2 as shown in Figure 6-9. Gear #2 must be timed with the "0" marks as shown for the gears to rotate freely.

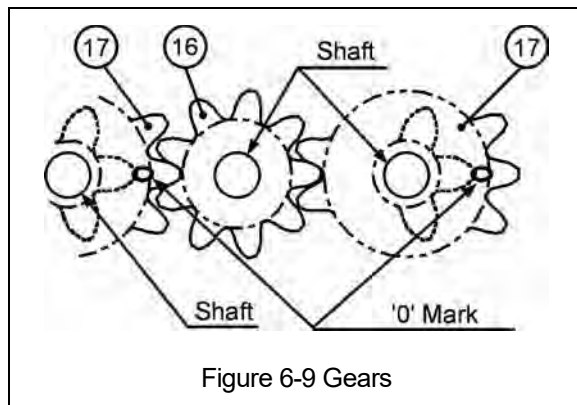


Figure 6-9 Gears

- 3) Apply (G1) grease to (16) Pinion, (17) Gear #2 and (18) Load Gear. Refer to Table 6-2 for the correct amount of grease.

| Table 6-2 Amount of Grease to Apply to the Gears by Hoist Code | |
|--|------------------------------|
| Hoist Code | Grease (Approximate) (Grams) |
| LB008, LB010 | 20 |
| LB015, LB028 | 30 |
| LB030, LB060, LB090 | 60 |

- 4) Install (13) Gear Case assembly over the gears and fix it firmly to the Stay Bolts with (14) Acorn Nut and (15) Spring Lock Washer. Make sure the top flat part of the gear case aligns with the flat on (12) Frame B.

6.4.7 Brake

- 1) Lightly apply (G2) grease to the Pawl Shaft and (22) Pawl. Refer to Figure 6-10.
- 2) **CAUTION** Use a minimal amount of grease on (22) Pawl to avoid getting grease on the friction surfaces of the brake.
- 3) Fasten two sets of (23) Pawl Spring and (22) Pawl with (24) Snap Ring.

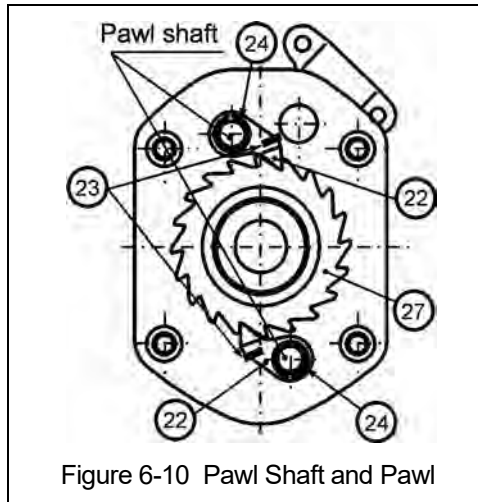


Figure 6-10 Pawl Shaft and Pawl

- 4) While holding two (22) pawls outward, install (25) Friction Disc, (26) Friction Plate, (28) Bushing, (27) Ratchet Disc and (26) Friction Plate properly in this order. Refer to Figure 6-11.


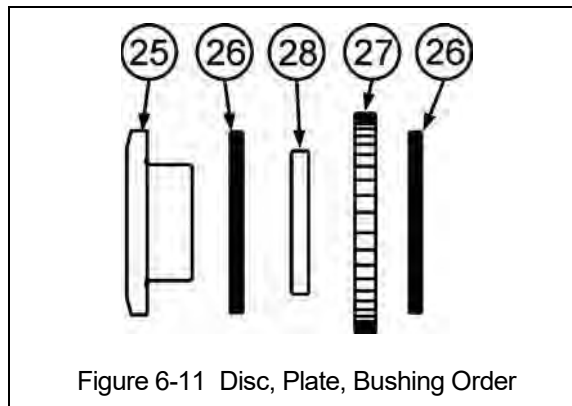


Figure 6-11 Disc, Plate, Bushing Order

- 5) **CAUTION** Make sure that the Pawl Spring fits into the pawl.
- 6) **CAUTION** Make sure that the pawl comes into good contact with the Ratchet Disc.
- 7) **CAUTION** The Friction Plates are dry (not lubricated). Do not apply oil to them.
- 8) **CAUTION** Ensure sure that (28) Bushing is sufficiently oiled. If it is not, soak the Bushing in turbine oil for a day and wipe off excess.


6.4.8 Hoist Lever and Body

- 1) Attach the Lever assembled in Section 6.4.2 to the previously assembled Brake. Fit (29) Brake Cover assembly and (10) Frame A assembly by screwing (33) Female Thread of the Lever assembly clockwise to the thread of (16) Pinion until it makes a clicking sound. Make sure the flat part of the Brake Cover aligns with the flat on Frame A.
- 2) Fasten (29) Brake Cover assembly firmly to the Stay Bolts with (14) Acom Nuts and (15) Spring Lock Washer.
- 3) **⚠ CAUTION** To eliminate a clearance in the Brake section, perform the following procedures before moving onto the next step.
 - A) Set the Selector Lever to 'N' position.
 - B) Turn (33) Female Thread clockwise to tighten the Brake lightly with (52) Load chain at the hook side held by hand firmly without (19) Load Sheave's rotation.
 - C) The hoist will make "clicking" sounds if the chain is not being held sufficiently. The clearance will be reduced while the hoist is "clicking". After tightening, make sure that the Female Thread will not rotate counterclockwise on the (16) Pinion.
- 4) To attach (44) Cam Guide to (16) Pinion, aligning the boss of the Guide slightly to the right of the middle of (33) Female Thread's boss as shown in Figure 6-12.
- 5) Apply (G3) grease lightly to the side of (44) Cam Guide.

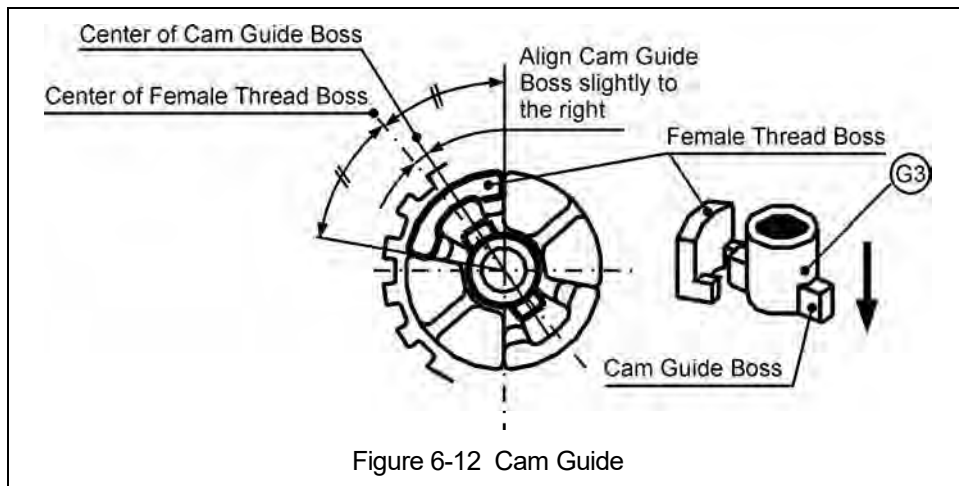


6.4.9 Free Chain Knob

- 1) Set (43) Brake Spring (silver color) into the slot of the back of (45) Free Chain Knob assembly. Refer to Figure 6-13. As indicated in Figure 6-13, set the end of the spring next to the rib of the knob.

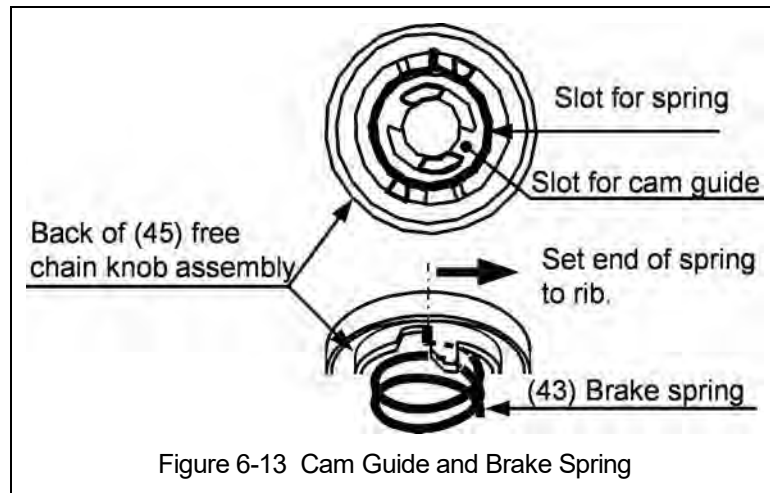

- 2) Fit the opposite end of (43) Brake Spring next to the boss of the Female Thread. Refer to Figure 6-14.

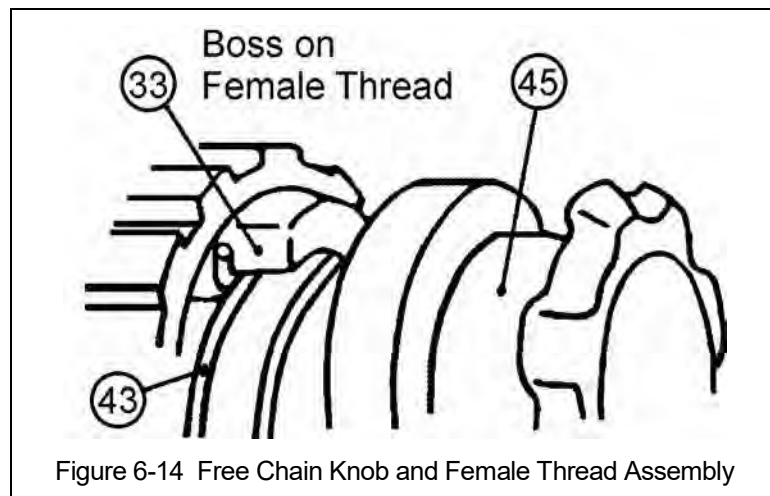

- 3) While holding the load chain on the hook side firmly to prevent (19) Load Sheave from rotating, turn (45) Free Chain Knob assembly 120° clockwise while pressing it lightly on (33) Female Thread. Refer to Figure 6-15. As the Free Chain Knob turns, the cam parts of (44) Cam Guide fit into the slots of the Free Chain Knob.
- 4) Rotate the Selector Lever to the Up or Down position to temporarily retain the (45) Free Knob.

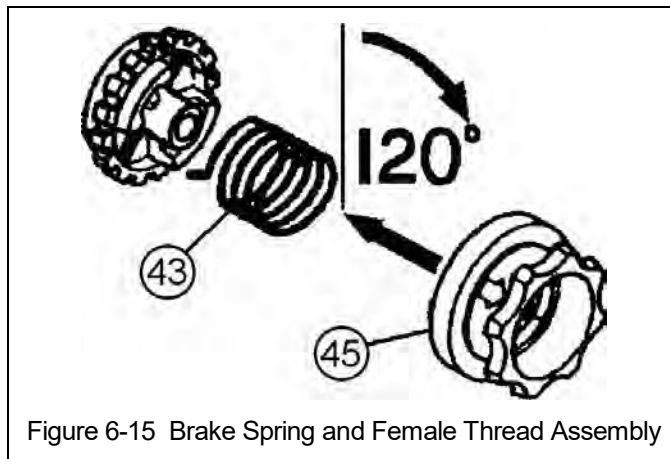


Figure 6-15 Brake Spring and Female Thread Assembly

- 5) Hook the outward-projecting end of (47) Free Chain Spring onto the slot at the back of (48) Spring Holder, and hook the other end (inward-projecting) of the Spring onto the slot of (45) Free Chain Knob assembly. Refer to Figure 6-16.


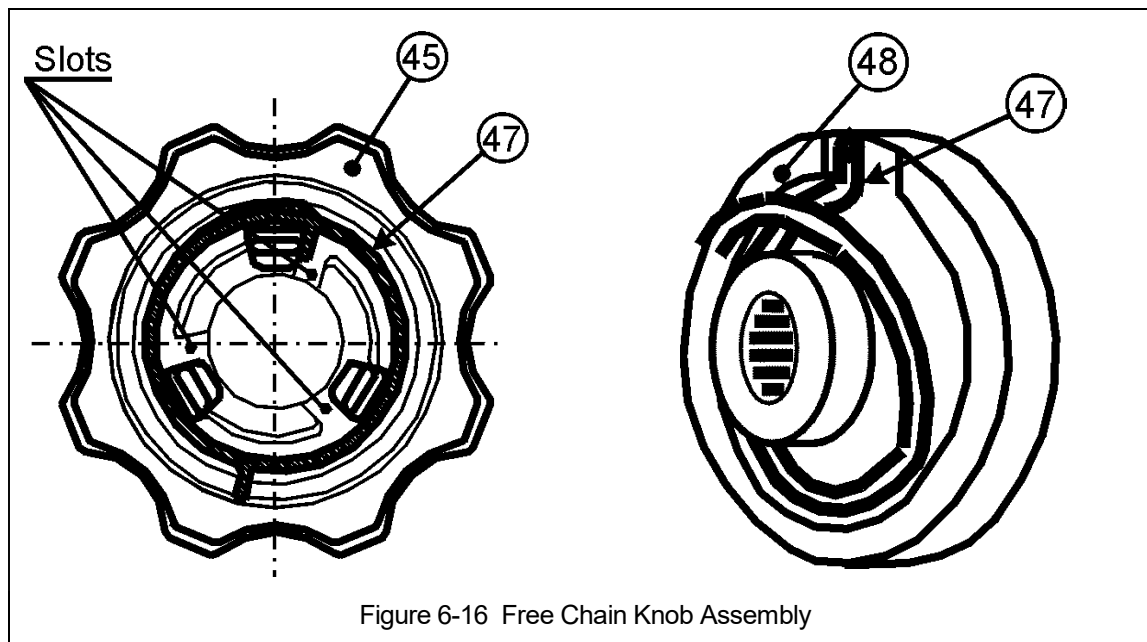


Figure 6-16 Free Chain Knob Assembly

- 6) Turn (48) Spring Holder 120° **counterclockwise** while lightly pressing it toward the (45) Free Chain Knob assembly. Install the spring holder onto the Pinion serration and hold it in place. Refer to Figure 6-17.
- 7) While holding the (48) Spring Holder in place, fasten it in place with the (49) Slotted Nut and (50) Split pin.
- 8) Set the Selector Lever to the 'N' position and pull the Free Chain Knob into the free chaining mode. Operate the hoist in the free chain mode to ensure correct performance.
- 9) **⚠ CAUTION** If the free chaining can not be performed, the hoist has been assembled incorrectly. Correctly reassemble the hoist in accordance with this procedure.

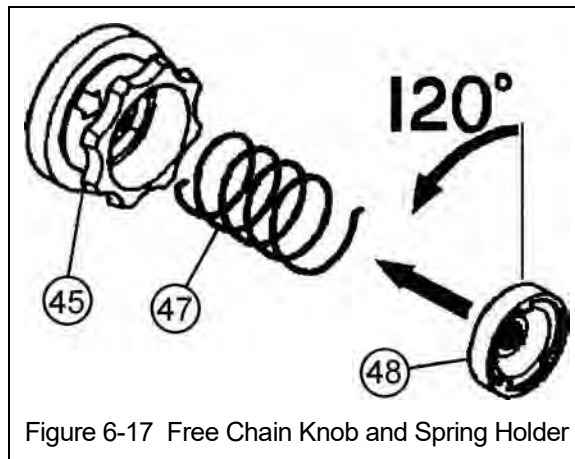


6.4.10 Preoperational Checks

- 1) Make sure all nuts, bolts and split pins are sufficiently fastened.
- 2) Make sure all components have been installed correctly.
- 3) **⚠ CAUTION** After assembly, perform the following preoperational checks before operating hoist.
 - 4) Make sure that the hoist operates properly under no load condition before lifting a load.
 - 5) Perform a load test at 125% of rated load in accordance with ASME B30.21.
 - 6) Record of load test and maintenance performed should be placed on file with the inspection records referenced in section 5.6.1.
 - 7) During lifting and lowering operations check the following.
 - There should be no irregular clicking or abnormal sounds when lifting.
 - Lever pull should not be difficult in lifting mode.
 - The hoist brake should not slip.



6.5 Chaining

6.5.1 Verify end links of chain are in the same plane. Refer to Figure 6-18.

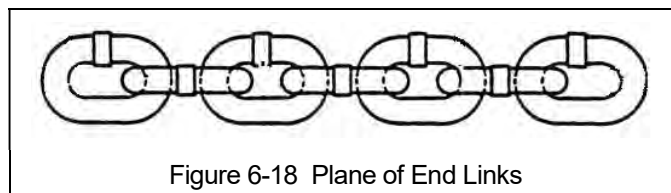

- 6.5.2 Place the hoist on its side with the top hook facing away from you and the lever on the right side.
- 6.5.3 Place the Selector Lever in the neutral position.
- 6.5.4 Insert a standing link into the load sheave with the weld facing away from the load sheave. Refer to Figure 6-19.
- 6.5.5 Rotate the free wheel knob clockwise to begin feeding the chain into the hoist.

- 6.5.6 Hang the hoist from a suitable fixture and continue to feed the chain until it exits through the bottom of the hoist. Make sure chain passes through, not over, both chain guides. Refer to Figure 6-20.

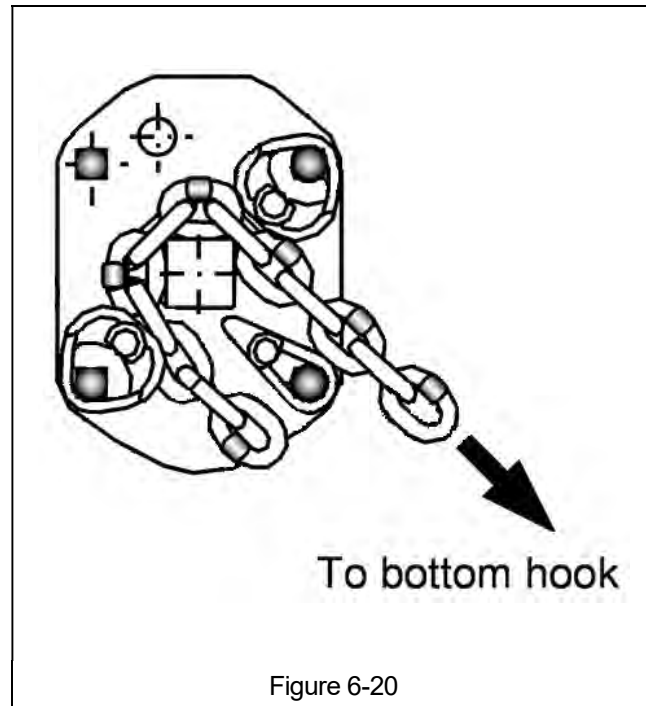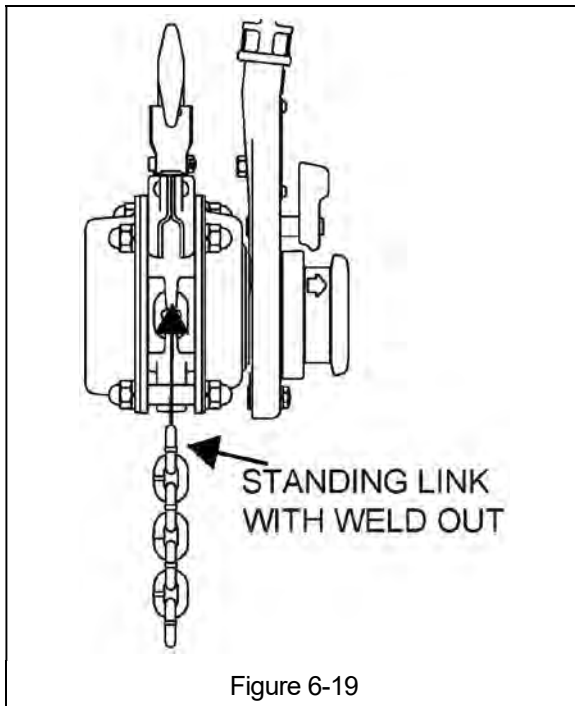

- 6.5.7 Pull chain out the bottom of the hoist until there is approx. 2 feet of chain on the load side of the hoist.
- 6.5.8 Attach a warning tag (WTAG9) to the chain stopper link, and attach the chain stopper link to the **NEXT TO LAST LINK** of chain on the no load side of the hoist.
- 6.5.9 For single fall hoists, insert load chain into the bottom hook, insert chain pin, attach castle nut, and insert split pin.
- 6.5.10 For 6T hoists, feed a piece of small diameter mechanics type wire through the bottom hook block around the idle sheave.
- 6.5.10.1 Make sure there are no twists in the load chain and attach the load chain to the wire in the bottom hook block.
 - 6.5.10.2 Feed the chain into the bottom hook block, making sure that the welds are facing the idle sheave. Refer to Figure 6-21.
 - 6.5.10.3 Remove wire from the chain and insert the end link of chain into the top hook block.
 - 6.5.10.4 Install chain pin, castle nut, and split pin.
- 6.5.11 For 9T hoists, feed a piece of small diameter mechanics type wire around the idle sheaves in the top and bottom hook blocks.
- 6.5.11.1 Make sure there are no twists in the load chain and attach the load chain to the wire in the bottom hook block.
 - 6.5.11.2 Feed the chain into the bottom hook block, making sure that the welds are facing the idle sheave. Refer to Figure 6-21.
 - 6.5.11.3 Attach the load chain to the wire in the top hook block and pull it around the idle sheave so that the end of the chain will exit the idle sheave towards the center of the bottom hook block. Refer to Figure 6-22.

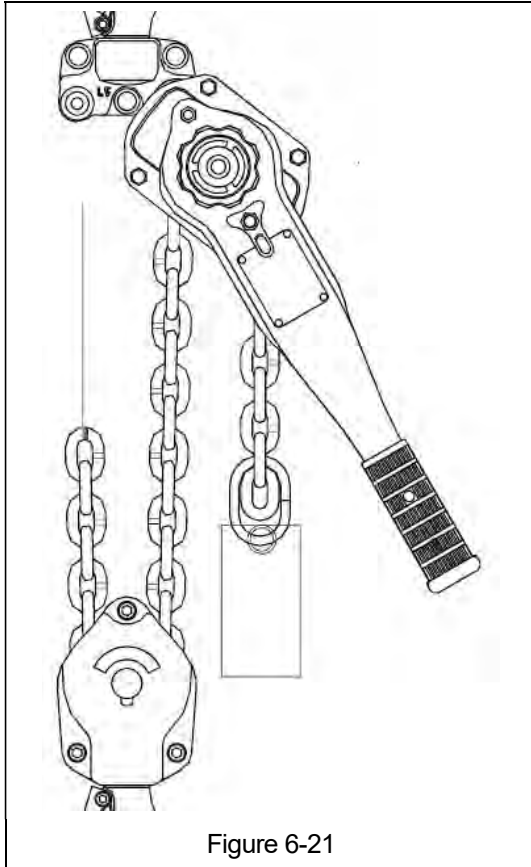


Figure 6-21

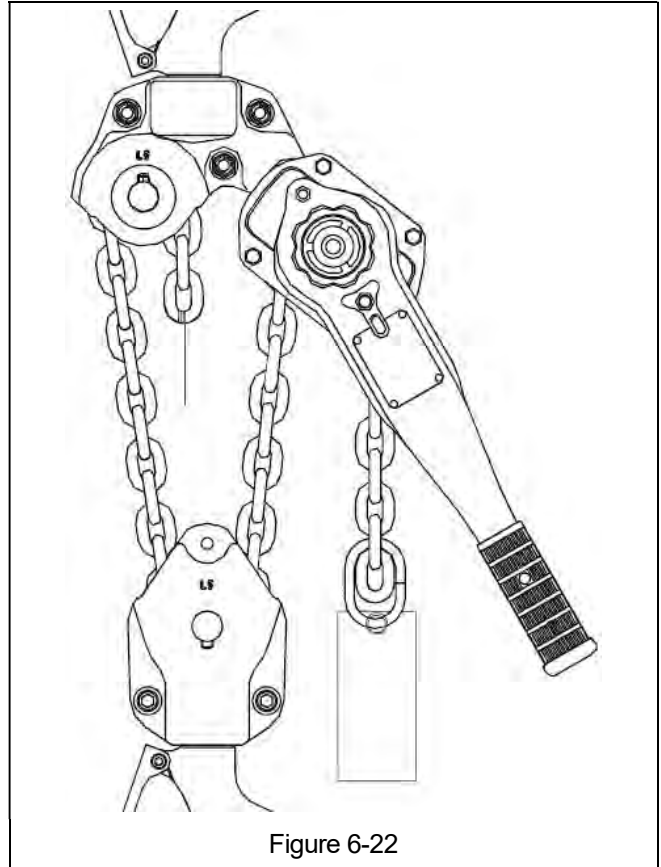


Figure 6-22

6.5.11.4 Install the chain pin, castle nut, and split pin.

6.6 Storage

6.6.1 The storage location should be clean and dry.

6.6.2 The hoist should be clean and dry. The load chain and all other exposed metal should be well lubricated.

6.7 Outdoor Installation

6.7.1 For hoist installations that are outdoors, the hoist should be covered or brought inside when not in use.

6.7.2 Possibility of corrosion on components of the hoist increases for installations where salt air and high humidity are present. Make frequent and regular inspections of the hoist's condition and operation.

7.0 Troubleshooting

⚠ WARNING

Read and comply with instructions in this manual and use the hoist properly.
 Checking the sounds from the hoist in operation is a critical inspection. Note hoist sounds during operation.
 If a defect is found in the hoist, stop using it immediately and check the cause of the defect.
 Only Trained and competent personnel should inspect and repair the hoist.

Table 7-1 Troubleshooting Guide

Note on proper operation:

- When lifting, the lever should make clicking sounds when moving the lever forward and backward.
- When lowering, the lever should make clicking sounds only when moving the lever backward (not forward).

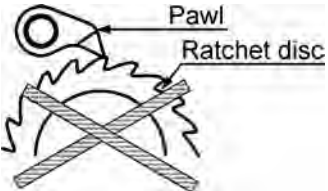
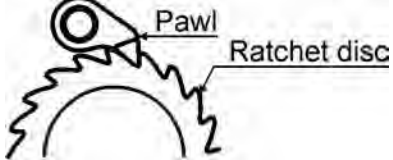
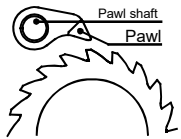
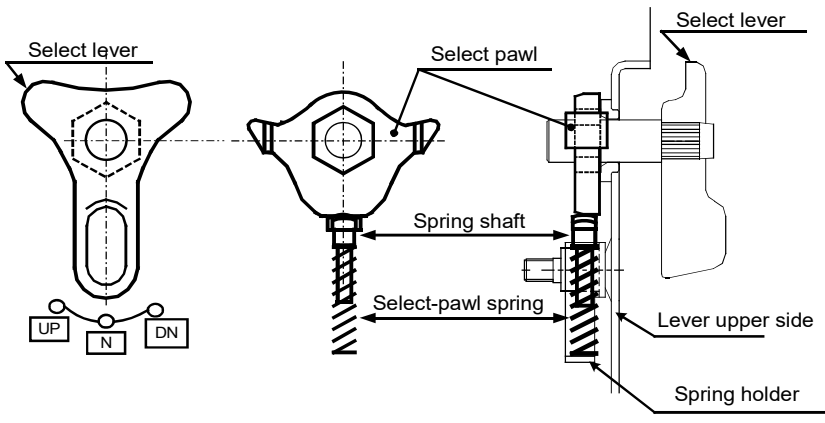
| Symptom | Cause | Remedy |
|---------------------------------------|---|---|
| Hoist will not lift – Slight clicking | Improper assembly of ratchet disc, disc installed backwards and making incorrect contact with the pawl.  | Reassemble the pawl and ratchet disc properly. Ensure that clicking sounds are heard before reuse.  |
| Hoist will not lift – Not Clicking | Pawl not engaging ratchet disc: <ul style="list-style-type: none"> ■ Dirt or corrosion between pawl and pawl shaft. | Clean and lubricate pawl and pawl shaft.  |
| | Faulty pawl spring | Replace pawl spring |
| | Improper selector lever fit <ul style="list-style-type: none"> ■ Missing selector pawl spring ■ Assembled incorrectly (wrong direction) | Reassemble properly and ensure selector lever clicks before reuse. |
| |  | Loose selector pawl spring |

Table 7-1 Troubleshooting Guide







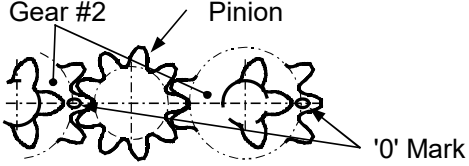
| Symptom | Cause | Remedy |
|---|--|--|
| Hoist will not lift – Lever will not operate | Gear #2 improperly timed | Reassemble gears properly and ensure smooth operation before reuse. ⚠ CAUTION Ensure the '0' marks of gear #2 are aligned properly, as shown.  |
| Hoist with Slip Clutch Hoist will not lift – Lever will operate but load will not move. | Slip Clutch activated. | Reduce load to less than rated capacity. |
| Hoist with Slip Clutch Hoist will not lift under rated capacity. | Slip Clutch malfunction. Due to frequently operating hoist with greater than rated load. | Replace friction clutch. Do not frequently operate hoist with greater than rated load. |
| Hoist will lift intermittently – Slight or irregular clicking | Poor pawl movement caused by faulty pawl spring. The spring is loose or damaged. Mis-assembly of pawl spring | Perform maintenance and/or repair. Reassemble it properly and ensure to check click sound of the pawl before reuse. |
| During operation, hoist idles or load drifts | Poor contact of load sheave and load chain caused by improper chain-reeving (see picture)  | Reassemble properly and ensure proper lifting before reuse.  |
| Hoist will not lift without load | Mis-assembly of brake spring Insufficient angle to set the spring will cause a poor braking.  | Reassemble properly. ⚠ CAUTION Turn the free chain knob 120° clockwise and set the brake spring.  |

Table 7-1 Troubleshooting Guide

| Symptom | Cause | Remedy |
|--|---------------|---|
| Hoist will not lift all the way (multiple fall hoists) | Capsized hook | Reset the capsized hook.  |

⚠ CAUTION Improper braking may cause improper load lowering. The hoist utilizes dry friction discs, do not apply oil to friction surfaces.

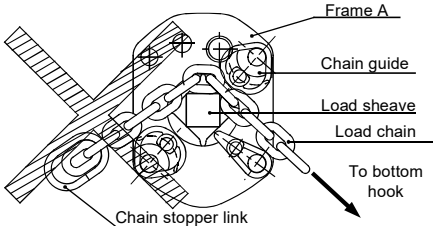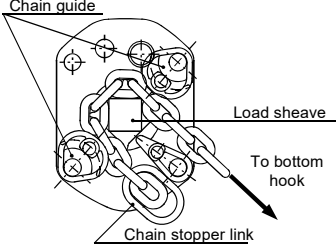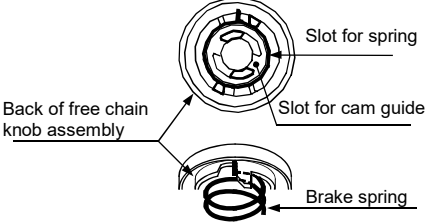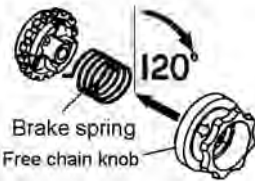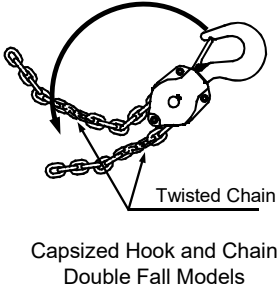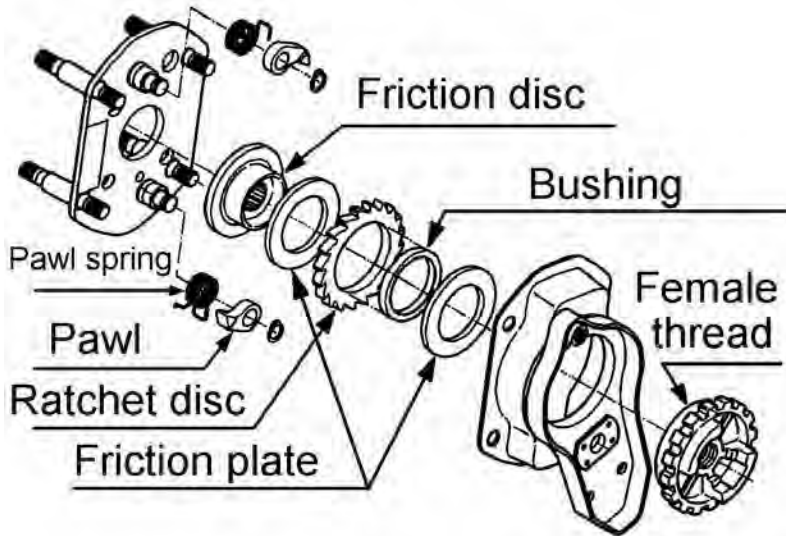

| Symptom | Cause | Remedy |
|------------------------------------|--|---|
| Load will not go down | Over tightened brake The hoist left under load for a long period Shock loaded during operation | Set the selector lever to 'DN' position and reset the brake by pulling harder on the lever. |
| | Brake rusted tight | Replace the rusty components and perform hoist maintenance. |
| Load drifts or slips when lowering | A foreign object between friction surfaces. | Remove the object and clean the surfaces. Replace if the friction surface is scarred. |
| | Brake slip caused by significant rust | Replace the rusty component and perform hoist maintenance. |

Table 7-1 Troubleshooting Guide

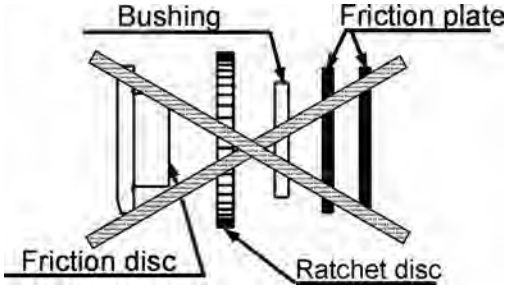
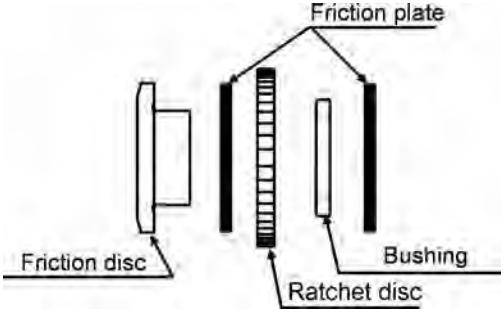
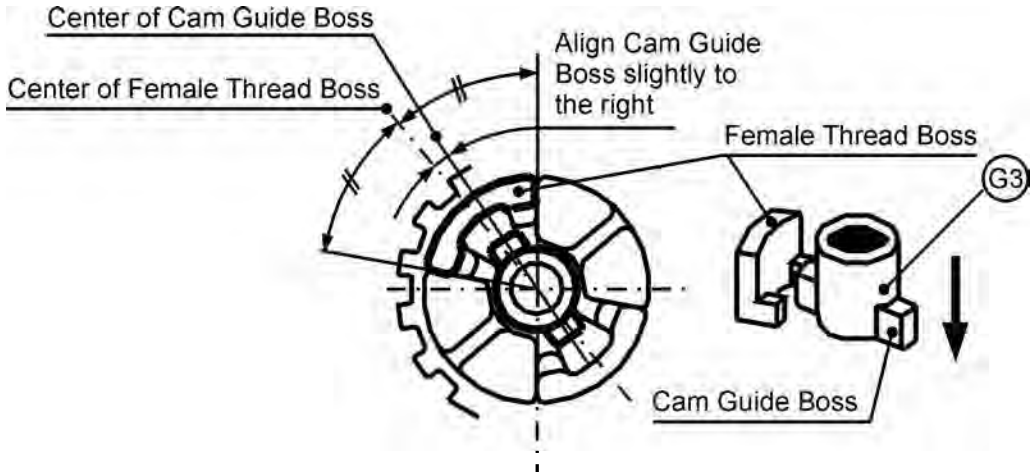
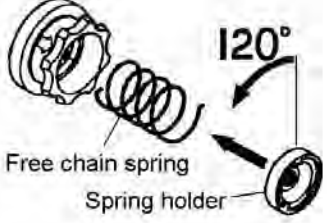
| Symptom | Cause | Remedy |
|---|---|---|
| | <p>Mis-assembly of friction plates, i.e. friction plates missing or at one side as shown.</p>  | <p>Reassemble properly as shown and ensure hoist functions properly before reuse.</p>  |
| | <p>Cracked friction plate caused by overload</p> | <p>Replace the friction plate and use the hoist properly within rated capacity.</p> |
| | <p>Friction plate wear caused by very frequent and long term use.</p> | <p>Perform hoist maintenance.</p> |
| <p>Load drifts or slips when lowering, continued</p> | <p>Mis-assembly of female thread and cam guide</p> | <p>Reassemble Female Thread and Cam Guide properly.</p> |
| | <p>Attaching cam guide without tightening female thread may cause an un-tightened brake.</p> | <p>CAUTION Secure the female thread firmly before attaching cam guide.</p> |
| |  | |
| <p>Free chain knob does not move in and out</p> | <p>Damaged or deformed friction plate</p> | <p>Perform hoist maintenance.</p> |
| <p>Hoist will not free wheel</p> | <p>Load chain pulled to hard and brake engaged</p> | <p>Pull the load chain with less force</p> |
| | <p>Mis-assembly of free chain spring Chain Spring twisted at excessive angle</p> | <p>See the symptom of "Hoist will not lift without load."</p> |
| <p>Load drifts or slips when selector lever is set in free chain mode</p> | <p>Mis-assembly of free chain spring Poorly tightened brake caused by insufficient twist angle.</p> | <p>See the symptom of "Hoist will not lift without load."</p> |

Table 7-1 Troubleshooting Guide

| Symptom | Cause | Remedy |
|--|---|--|
| Hard to reset the hoist out of free chain mode | Mis-assembly of free chain spring Insufficient twist angle | Reassemble properly.  |

8.0 Warranty

All products sold by Harrington Hoists, Inc. are warranted to be free from defects in material and workmanship from date of shipment by Harrington for the following periods:

- 1 year – Electric and Air Powered Hoists (excluding (N)ER2 Enhanced Features Models), Powered Trolleys, Powered Tiger Track Jibs and Gantries, Crane Components, Sling Chain, Spare / Replacement Parts**
- 2 years – Manual Hoists & Trolleys, Beam Clamps**
- 3 years – (N)ER2 Enhanced Features Model Hoists**
- 5 years – Manual Tiger Track Jibs and Gantries, TNER Pull - Rotor Motor Brake**
- 10 years – (N)ER2 “The Guardian” Smart Brake**

The product must be used in accordance with manufacturer’s recommendations and must not have been subject to abuse, lack of maintenance, misuse, negligence, or unauthorized repairs or alterations.

Should any defect in material or workmanship occur during the above time period in any product, as determined by Harrington Hoist’s inspection of the product, Harrington Hoists, Inc. agrees, at its discretion, either to replace (not including installation) or repair the part or product free of charge and deliver said item F.O.B. Harrington Hoists, Inc. place of business to customer.

Customer must obtain a Return Goods Authorization as directed by Harrington or Harrington’s published repair center prior to shipping product for warranty evaluation. An explanation of the complaint must accompany the product. Product must be returned freight prepaid. Upon repair, the product will be covered for the remainder of the original warranty period. Replacement parts installed after the original warranty period will only be eligible for replacement (not including installation) for a period of one year from the installation date. If it is determined there is no defect, or that the defect resulted from causes not within the scope of Harrington’s warranty, the customer will be responsible for the costs of returning the product.

Harrington Hoists, Inc. disclaims any and all other warranties of any kind expressed or implied as to the product’s merchantability or fitness for a particular application. Harrington will not be liable for death, injuries to persons or property or for incidental, contingent, special or consequential damages, loss or expense arising in connection with the use or inability whatever, regardless of whether damage, loss or expense results from any act or failure to act by Harrington, whether negligent or willful, or from any other reason.

This Page Intentionally Left Blank

9.0 Parts List

When ordering Parts, please provide the Hoist code number, lot number and serial number located on the Hoist nameplate (see Figure 9-1 and Figure 9-2 below).

Reminder: Per Sections 1.1 and 3.4.4 to aid in ordering parts and product support, record the hoist Code, Lot and Serial Number in the space provided on the cover of this manual.

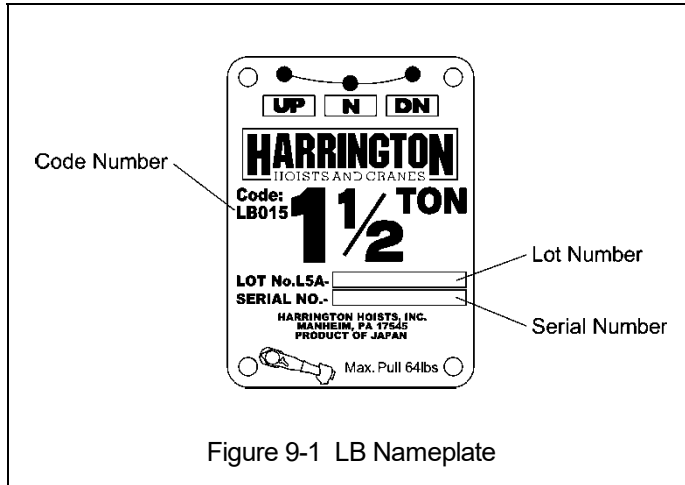


Figure 9-1 LB Nameplate



Figure 9-2 LB with Slip Clutch Nameplate

The parts list is arranged into the following sections:

| Section | Page |
|---------------------------------------|-------------|
| 9.1 3/4 to 3 Ton Parts..... | 56 |
| 9.2 Additional 6 and 9 Ton Parts..... | 58 |
| 9.3 Optional Parts..... | 59 |

9.1 3/4 to 3 Ton Parts

▲ CAUTION MODEL L4 AND MODEL L5 CHAIN IS NOT INTERCHANGEABLE.

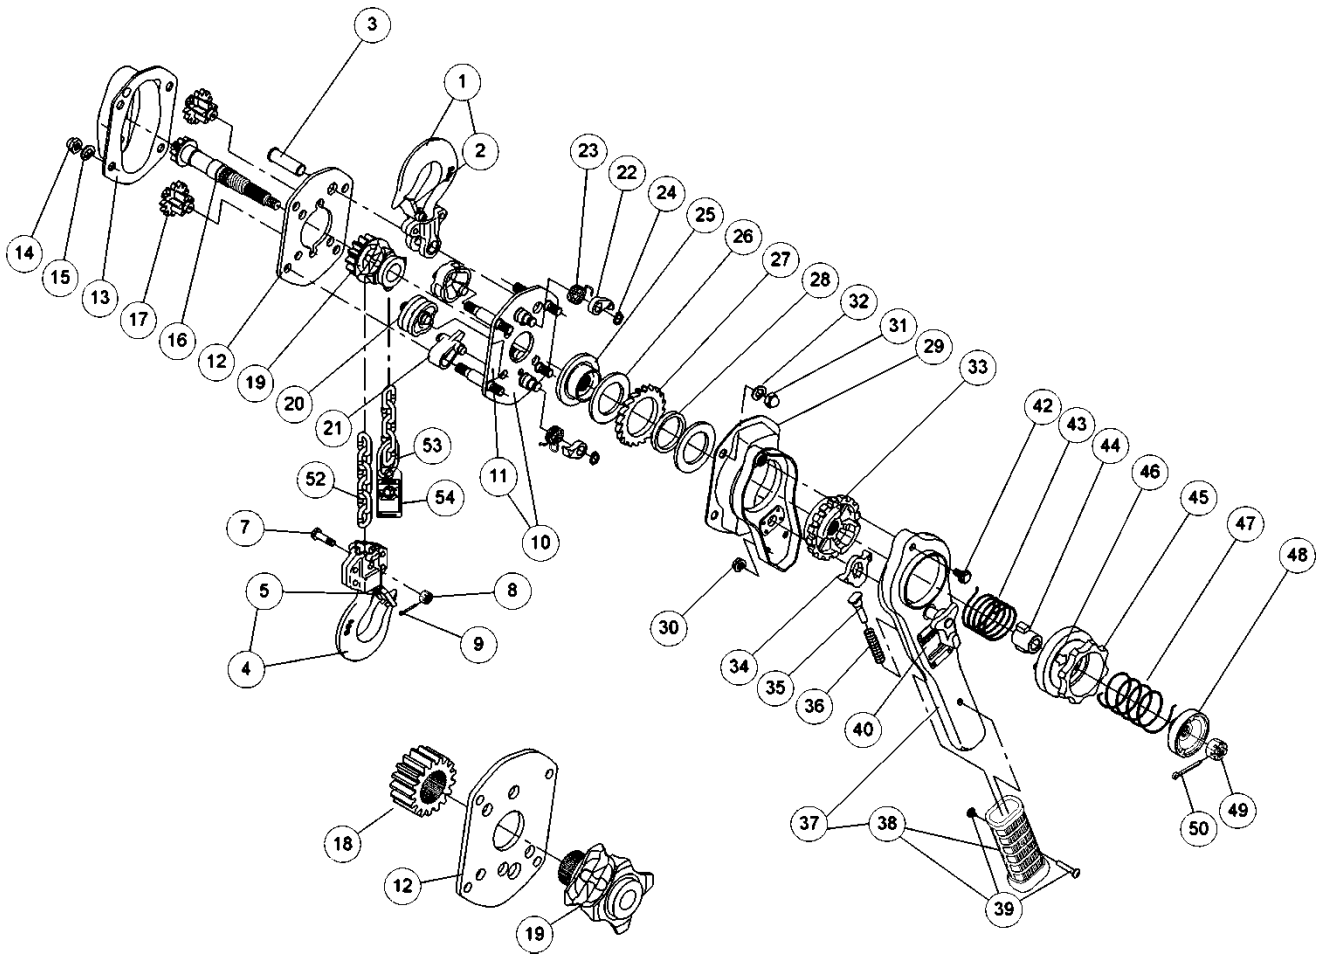


Figure 9-2 3/4 to 3 Ton Parts

9.1 3/4 to 3 Ton Parts

| Fig. No. | Name | Parts Per Hoist | 3/4 Ton | 1 Ton | 1 1/2 Ton | 2 Ton | 2 3/4 Ton | 3 Ton |
|----------|-----------------------|-----------------|--------------|-------------|-------------|-------------|-------------|--------------|
| 1 | Top Hook Comp. Set | 1 | L5BU0081001 | L5BU0101001 | L5BU0151001 | L5BU0201001 | L5BU0281001 | L5BU0301001 |
| 2 | Latch Assembly | 1 | L5BA0081071 | L5BA0101071 | L5BA0161071 | L5BA0251071 | | L5BA0321071 |
| 3 | Top Pin | 1 | L5BA0089163 | | L5BA0169163 | L5BA0259163 | | L5BA0329163 |
| 4 | Bottom Hook Comp. Set | 1 | L5BU0081021 | L5BU0101021 | L5BU0151021 | L5BU0201021 | L5BU0281021 | L5BU0301021 |
| 5 | Latch Assembly | 1 | L5BA0081071 | L5BA0101071 | L5BA0161071 | L5BA0251071 | | L5BA0321071 |
| 7 | Chain Pin | 1 | L4041008 | | M3041015 | L5BA0259041 | | L4BH0309041 |
| 8 | Slotted Nut | 1 | M3049005 | | M3049010 | M2049020 | | |
| 9 | Split Pin | 1 | 9009402 | | 9009411 | 9009412 | | |
| 10 | Frame A Assembly | 1 | L5BA0085101 | | L5BA0165101 | L5BA0255101 | | L5BA0325101 |
| 11 | Nameplate F | 1 | C3BA0059806 | | | | | |
| 12 | Frame B | 1 | L5BA0089102 | | L5BA0169102 | L5BA0259102 | | L5BA0329102 |
| 13 | Gear Case Assembly | 1 | L5BA0085103 | | L5BA0165103 | L5BA0255103 | | L5BA0325103 |
| 14 | Acorn Nut | 4 | J1ND00530080 | | | | | |
| 15 | Spring Lock Washer | 4 | 9012711 | | | | | |
| 16 | Pinion | 1 | L5BA0089111 | | L5BA0169111 | L5BA0259111 | | L5BA0329111 |
| 17 | Gear #2 | 2 | L5BA0089112 | | L5BA0169112 | L5BA0259112 | | L5BA0329112 |
| 18 | Load Gear | 1 | | | | L5BA0259114 | | L5BA0329114 |
| 19 | Load Sheave | 1 | L5BA0089116 | | L5BA0169116 | L5BA0259116 | | L5BA0329116 |
| 20 | Chain Guide | 2 | L5BA0089161 | | L5BA0169161 | L5BA0259161 | | L5BA0329161 |
| 21 | Stripper | 1 | L5BA0089162 | | L5BA0169162 | L5BA0259162 | | L5BA0329162 |
| 22 | Pawl | 2 | L4155008 | | | L5BA0259155 | | L4155030 |
| 23 | Pawl Spring | 2 | L5BA0089158 | | L5BA0169158 | L5BA0259158 | | L5BA0329158 |
| 24 | Snap Ring | 2 | L4188008 | | | | | L4188015 |
| 25 | Friction Disc | 1 | L5BA0089153 | | | | | L5BA0329153 |
| 26 | Friction Plate | 2 | L4151008 | | | | | L4151015 |
| 27 | Ratchet Disc | 1 | L4152008 | | | | | L4152015 |
| 28 | Bushing | 1 | L4154008 | | | | | L4154015 |
| 29 | Brake Cover Assembly | 1 | L5BA0085214 | | L5BA0165214 | L5BA0255214 | | L5BA0325214 |
| 30 | Flange Nut | 2 | J1NF00210060 | | | | | J1NE00510080 |
| 31 | Acorn Nut | 4 | J1ND00230080 | | | | | |
| 32 | Spring Lock Washer | 4 | 9012711 | | | | | |
| 33 | Female Thread | 1 | L5BA0089160 | | | | | L5BA0329160 |
| 34 | Select Pawl | 1 | L4218008 | | | | | L4218015 |
| 35 | Spring Shaft | 1 | L4222008 | | | | | L4222015 |
| 36 | Change-Over Spring | 1 | L4223008 | | | | | L4223015 |
| 37 | Lever Assembly | 1 | L5BA0086211 | | L5BA0166211 | | | L5BA0326211 |
| 38 | Grip Assembly | 1 | L5BA0081231 | | L4BA0081231 | | | L4BA0151231 |
| 39 | Binding Screw | 1 | L5BA0089232 | | | | | |
| 40 | Nameplate | 1 | L5BU0089800 | L5BU0109800 | L5BU0159800 | L5BU0209800 | L5BU0289800 | L5BU0309800 |
| 42 | Hex Screw | 1 | L4221008 | | | | | L4221015 |
| 43 | Brake Spring | 1 | L4207008 | | | | | L4207015 |
| 44 | Cam Guide | 1 | L5BA0089203 | | | | | L4203015 |
| 45 | Free Chain Knob | 1 | L4201008 | | | | | L4201015 |
| 46 | Name Plate U | 1 | L4810008 | | | | | |
| 47 | Free Chain Spring | 1 | L4205008 | | | | | L4205015 |
| 48 | Spring Holder | 1 | L5BA0089208 | | | | | L5BA0329208 |
| 49 | Slotted Nut | 1 | M2049020 | | | | | |
| 50 | Split Pin | 1 | 9009412 | | | | | |
| 52 | Load Chain | 1 | LCL5010NP | | LCL5015NP | LCL5028NP | | LCL5030NP |
| 53 | Chain Stopper Link | 1 | L5BA0089045 | | L5BA0169045 | L5BA0259045 | | L5BA0329045 |
| 54 | Warning Tag | 1 | WTAG9 | | | | | |

9.2 Additional 6 and 9 Ton Parts

⚠ CAUTION MODEL L4 AND MODEL L5 CHAIN IS NOT INTERCHANGEABLE.


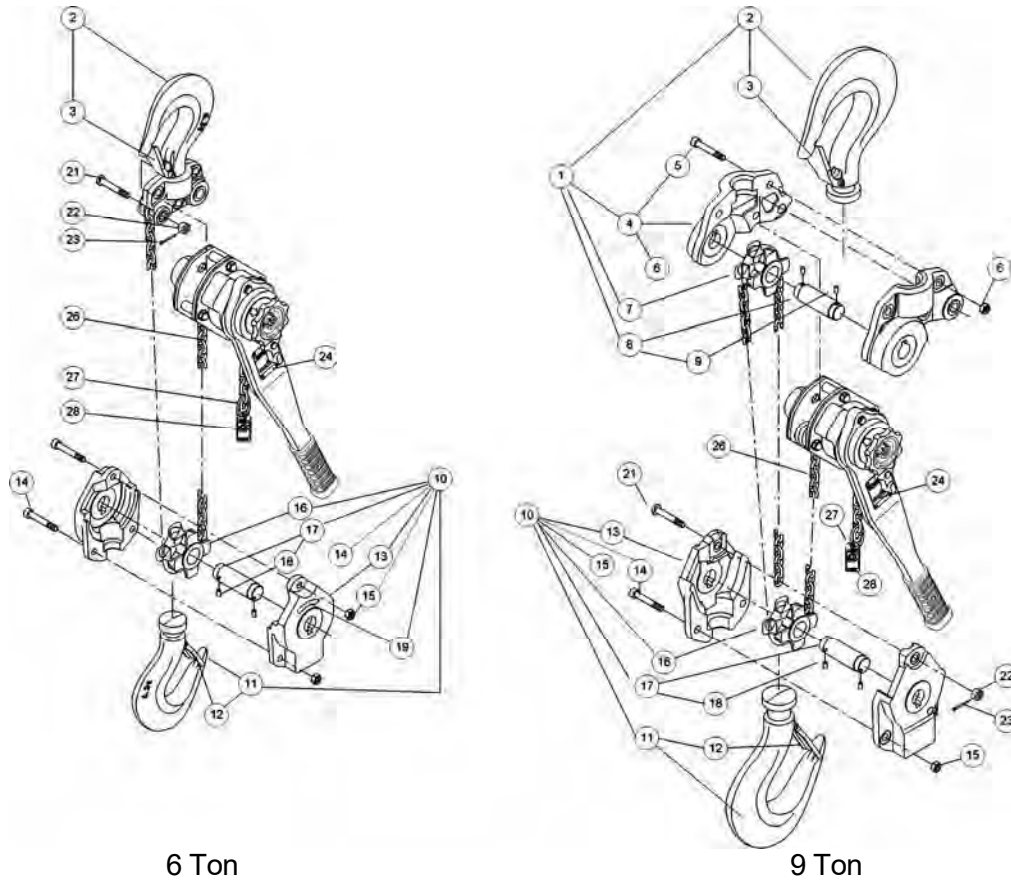


Figure 9-3 6 and 9 Ton Parts

| Figure No. | Name | Parts Per Hoist | 6 Ton | 9 Ton |
|------------|-----------------------|-----------------|-------------|-------------|
| 1 | Top Hook Complete Set | 1 | | L5BA0901001 |
| 2 | Hook Assembly | 1 | L5BU0601001 | L5BA0902001 |
| 3 | Latch Assembly | 1 | L5BA0631071 | L5BA0901071 |
| 4 | Top Yoke Assembly | 1 | | L5BA0902011 |
| 5 | Socket Bolt | 3 | | 90912116 |
| 6 | Lever Nut | 3 | | L4082090 |
| 7 | Idle Sheave | 1 | | L5BA0639051 |
| 8 | Shaft Assembly | 1 | | L4053060 |
| 9 | Shaft Stopper Pin | 2 | | L4083060 |

| Figure No. | Name | Parts Per Hoist | 6 Ton | 9 Ton |
|------------|---------------------------------|-----------------|-------------|-------------|
| 10 | Bottom Hook Complete Set | 1 | L5BU0601021 | L5BA0901021 |
| 11 | Hook Assembly | 1 | L5BU0602001 | L5BA0902001 |
| 12 | Latch Assembly | 1 | L5BA0631071 | L5BA0901071 |
| 13 | Bottom Yoke Assembly (2 Halves) | 1 | L5BA0639031 | L5BA0909031 |
| 14 | Socket Bolt | 3 | 9091296 | |
| | | 2 | | 90912116 |
| 15 | Lever Nut | 3 | L4082060 | |
| | | 2 | | L4082090 |
| 16 | Idle Sheave | 1 | L5BA0639051 | |
| 17 | Shaft Assembly | 1 | L4053060 | |
| 18 | Shaft Stopper Pin | 2 | L4083060 | |
| 19 | Nameplate C | 1 | 80173 | |
| 21 | Chain Pin | 1 | L4BH0609041 | |
| 22 | Slotted Nut | 1 | M2049020 | |
| 23 | Split Pin | 1 | 9009412 | |
| 24 | Nameplate | 1 | L5BU0609800 | L5BU0909800 |
| 26 | Load Chain | FT | LCL5030NP | |
| 27 | Chain Stopper Link | 1 | L5BA0329045 | |
| 28 | Warning Tag | 1 | WTAG9 | |

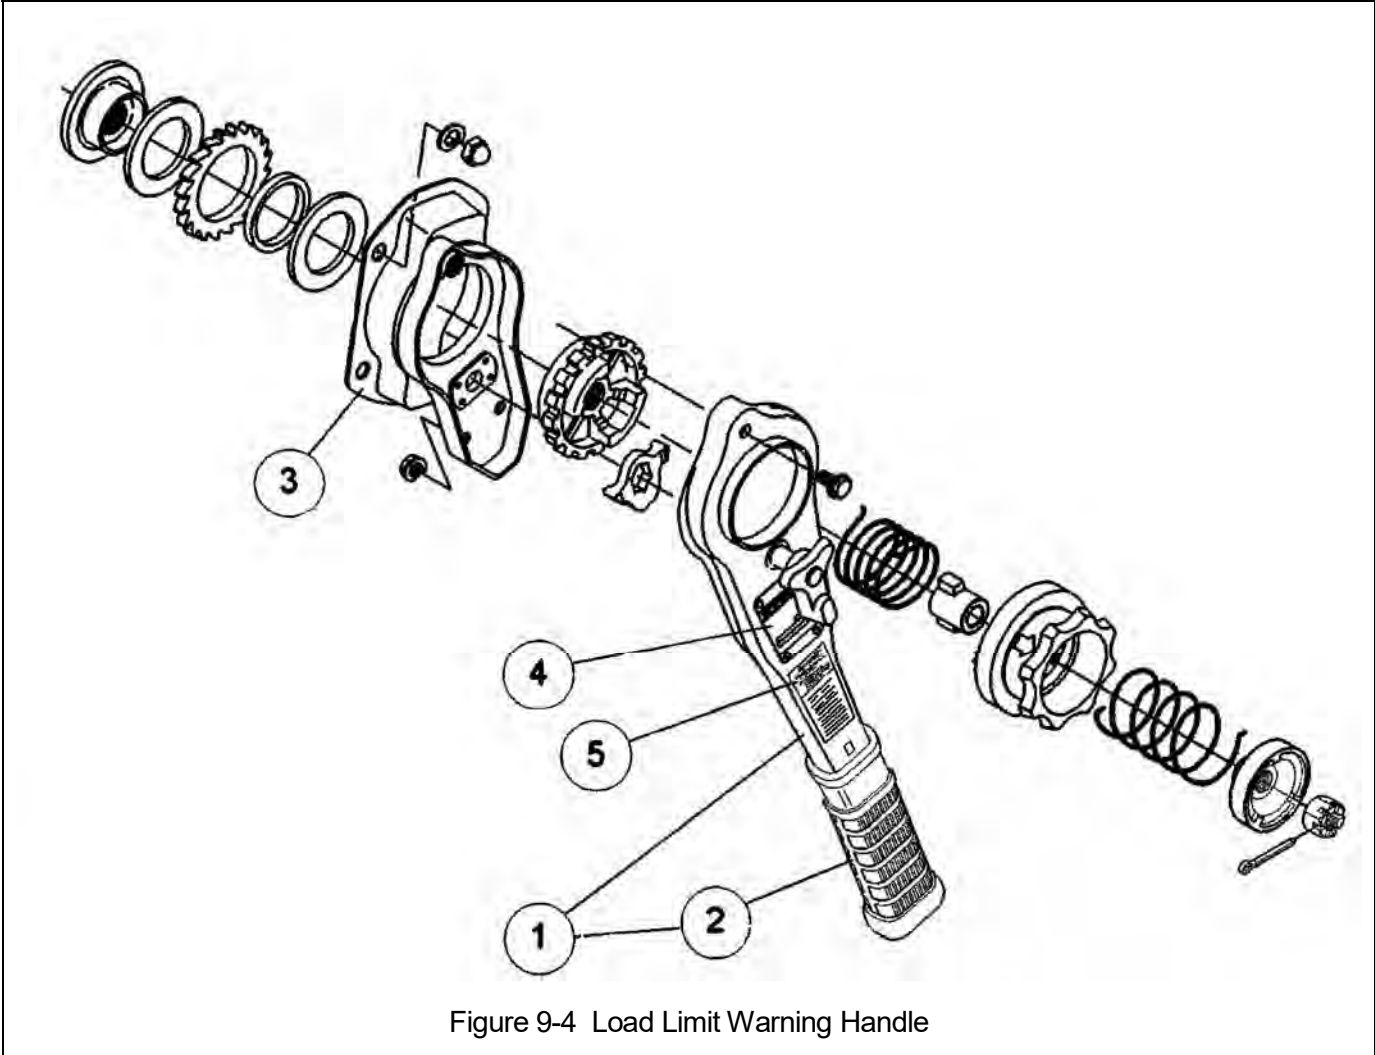

Load Limit Warning Handle

| Fig. No. | Name | Parts Per Hoist | ¼ Ton | 1 Ton | 1 ½ Ton | 2 Ton | 2 ¾ Ton | 3 Ton | 6 Ton | 9 Ton |
|----------|---------------------|-----------------|--------------|--------------|--------------|--------------|--------------|--------------|--------------|--------------|
| 1 | Lever Assembly | 1 | Y3SU008-6211 | Y3SU010-6211 | Y3SU015-6211 | Y3SU020-6211 | Y3SU028-6211 | Y3SU030-6211 | | |
| 2 | Grip Assembly | 1 | L4231S008 | | | | | | | |
| 3 | Brake Cover | 1 | Y3SE0085214 | | | | | | | |
| 4 | Name Plate w/rivets | 1 | Y3SU008-9800 | Y3SU010-9800 | Y3SU015-9800 | Y3SU020-9800 | Y3SU028-9800 | L5BU030-9800 | L5BU060-9800 | L5BU090-9800 |
| 5 | LLWH Warning Label | 1 | 80175 | | | | | | | |

9.3 Optional Parts

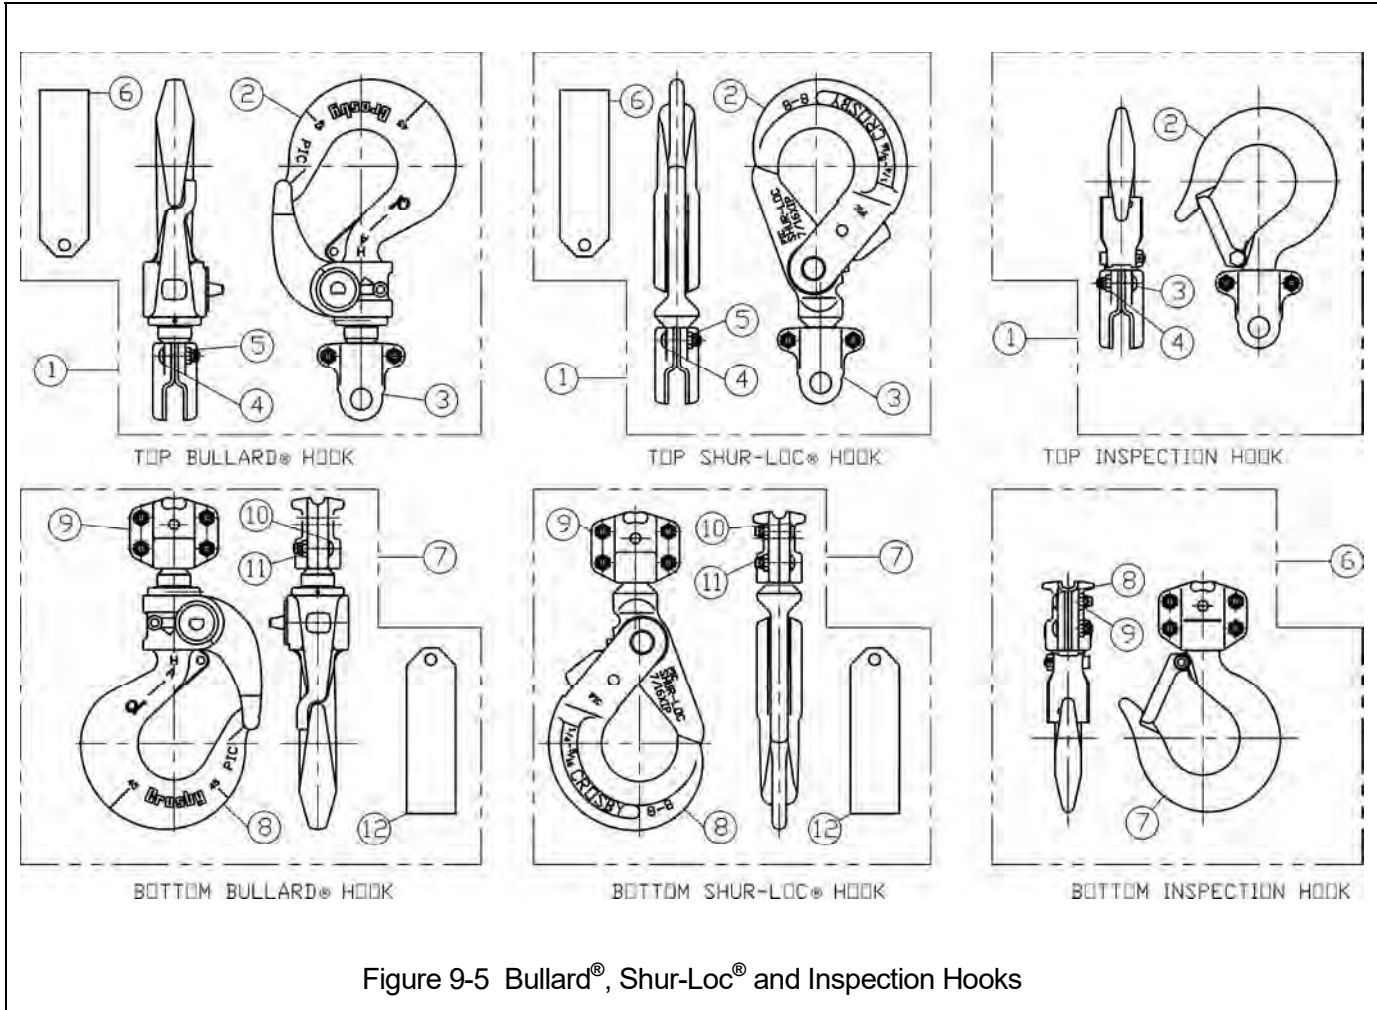


Figure 9-5 Bullard®, Shur-Loc® and Inspection Hooks

Bullard® Hooks

| Fig. No. | Name | Parts Per Hoist | ¼ Ton | 1 Ton | 1 ½ Ton | 2 Ton | 2 ¾ Ton | 3 Ton | 6 Ton | 9 Ton |
|----------|-----------------------------------|-----------------|------------|------------|------------|------------|---------|---------|-------|---------|
| 1 | Bullard® Top Hook Complete Set | 1 | 6028405 | 6028406 | 6028407 | 6028408 | | | | 6028404 |
| 2 | Bullard® Hook Assembly | 1 | 60161 | 60163 | 60722 | 60167 | | | | 60171 |
| 3 | Top Yoke Kit | 1 | TYKITL5008 | TYKITL5015 | TYKITL5028 | TYKITL5030 | | | | |
| 4 | Button Head Screw | 2 | 9012612 | | 9012602 | | | | | |
| 5 | Flexloc® Nut | 2 | 9012613 | | 9012604 | | | | | |
| 6 | Warning Tag | 1 | WTAG6* | | | | | | | |
| 7 | Bullard® Bottom Hook Complete Set | 1 | 6028908 | 6028909 | 6028910 | 6028911 | 6028906 | 6028907 | | |
| 8 | Bullard® Hook Assembly | 1 | 60161 | 60163 | 60722 | 60167 | 60170 | 60171 | | |
| 9 | Bottom Yoke Kit | 1 | BYKITL5008 | BYKITL5015 | BYKITL5028 | BYKITL5030 | | | | |
| 10 | Button Head Screw | 4 | 9012612 | | 9012602 | | | | | |
| 11 | Flexloc® Nut | 4 | 9012613 | | 9012604 | | | | | |
| 12 | Warning Tag* | 1 | WTAG6* | | | | | | | |

*Hoist with Bullard® Hook(s) must have WTAG6 and WTAG9 installed. (See page 51 for WTAG9).

9.3 Optional Parts

Shur-Loc® Hooks

| Fig. No. | Name | Parts Per Hoist | ¾ Ton | 1 Ton | 1 ½ Ton | 2 Ton | 2 ¾ Ton | 3 Ton |
|----------|------------------------------------|-----------------|------------|-------|------------|---------|------------|------------|
| 1 | Shur-Loc® Top Hook Complete Set | 1 | 6030004 | | 6030005 | | 6030006 | 6030007 |
| 2 | Shur-Loc® Hook Assembly | 1 | 60141 | | 60143 | | 60723 | 60147 |
| 3 | Top Yoke Kit | 1 | TYKITL5008 | | TYKITL5015 | | TYKITL5028 | TYKITL5030 |
| 4 | Button Head Screw | 2 | 9012612 | | | 9012602 | | |
| 5 | Flexloc® Nut | 2 | 9012613 | | | 9012604 | | |
| 6 | Warning Tag | 1 | WTAG6* | | | | | |
| 7 | Shur-Loc® Bottom Hook Complete Set | 1 | 6029906 | | 6029907 | | 6029908 | 6029909 |
| 8 | Shur-Loc® Hook Assembly | 1 | 60141 | | 60143 | | 60723 | 60147 |
| 9 | Bottom Yoke Kit | 1 | BYKITL5008 | | BYKITL5015 | | BYKITL5028 | BYKITL5030 |
| 10 | Button Head Screw | 4 | 9012612 | | | 9012602 | | |
| 11 | Flexloc® Nut | 4 | 9012613 | | | 9012604 | | |
| 12 | Warning Tag | 1 | WTAG6* | | | | | |

*Hoist with Shur-Loc® Hook(s) must have WTAG6 and WTAG9 installed. (See page 51 for WTAG9).

Inspection Hooks

| Fig. No. | Name | Parts Per Hoist | ¾ Ton | 1 Ton | 1 ½ Ton | 2 Ton | 2 ¾ Ton | 3 Ton |
|----------|--------------------------|-----------------|------------|------------|------------|------------|------------|------------|
| 1 | Top Hook Complete Set | 1 | 6073301 | 6073302 | 6073303 | 6073304 | 6073305 | 6073306 |
| 2 | Hook W/Latch & Yoke | 1 | THKITL5008 | THKITL5010 | THKITL5015 | THKITL5020 | THKITL5028 | THKITL5030 |
| 3 | Button Head Screw | 2 | 9012612 | | | 9012602 | | |
| 4 | Flexloc® Nut | 2 | 9012613 | | | 9012604 | | |
| 6 | Bottom Hook Complete Set | 1 | 6073401 | 6073402 | 6073403 | 6073404 | 6073405 | 6073406 |
| 7 | Hook W/Latch & Yoke | 1 | BHKITL5008 | BHKITL5010 | BHKITL5015 | BHKITL5020 | BHKITL5028 | BHKITL5030 |
| 8 | Button Head Screw | 2 | 9012612 | | | 9012602 | | |
| 9 | Flexloc® Nut | 2 | 9012613 | | | 9012604 | | |

9.3 Optional Parts

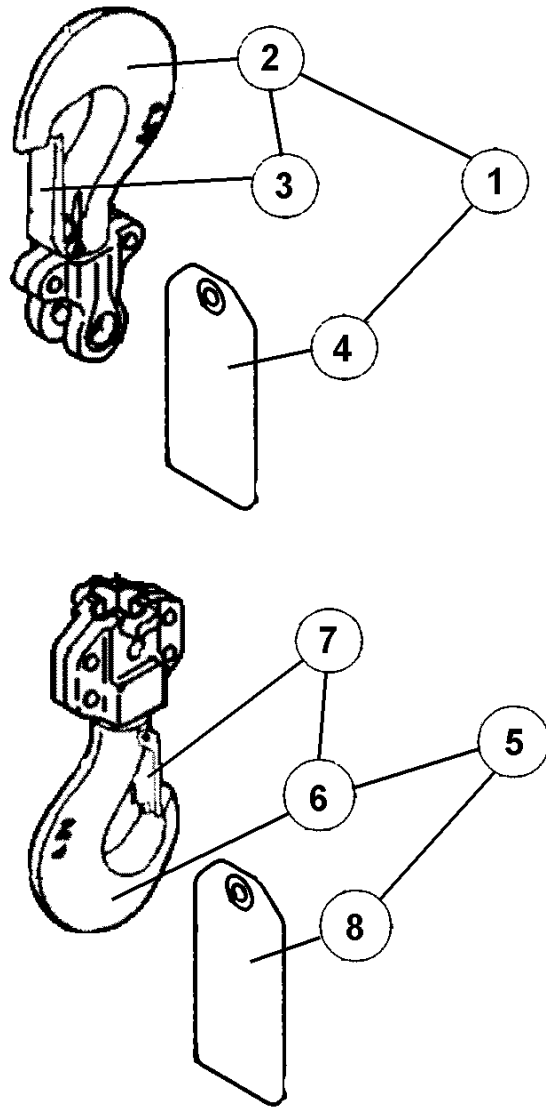


Figure 9-6 Shipyard Hooks

Shipyard Hooks

| Fig. No. | Name | Parts Per Hoist | 1 ½ Ton | 3 Ton |
|----------|--------------------------|-----------------|-------------|-------------|
| 1 | Top Hook Complete Set | 1 | 6078005 | 6078007 |
| 2 | Top Hook Assembly | 1 | L5BZ0151001 | L5BZ0301001 |
| 3 | Latch Assembly | 1 | L5BZ0151071 | L5BZ0301071 |
| 4 | Warning Tag | 1 | WTAG6* | |
| 5 | Bottom Hook Complete Set | 1 | 6078006 | 6078008 |
| 6 | Bottom Hook Assembly | 1 | L5BZ0151021 | L5BZ0301021 |
| 7 | Latch Assembly | 1 | L5BZ0151071 | L5BZ0301071 |
| 8 | Warning Tag | 1 | WTAG6* | |

*Hoist with Shipyard Hook(s) must have WTAG6 and WTAG9 installed. (See page 51 for WTAG9).

9.3 Optional Parts

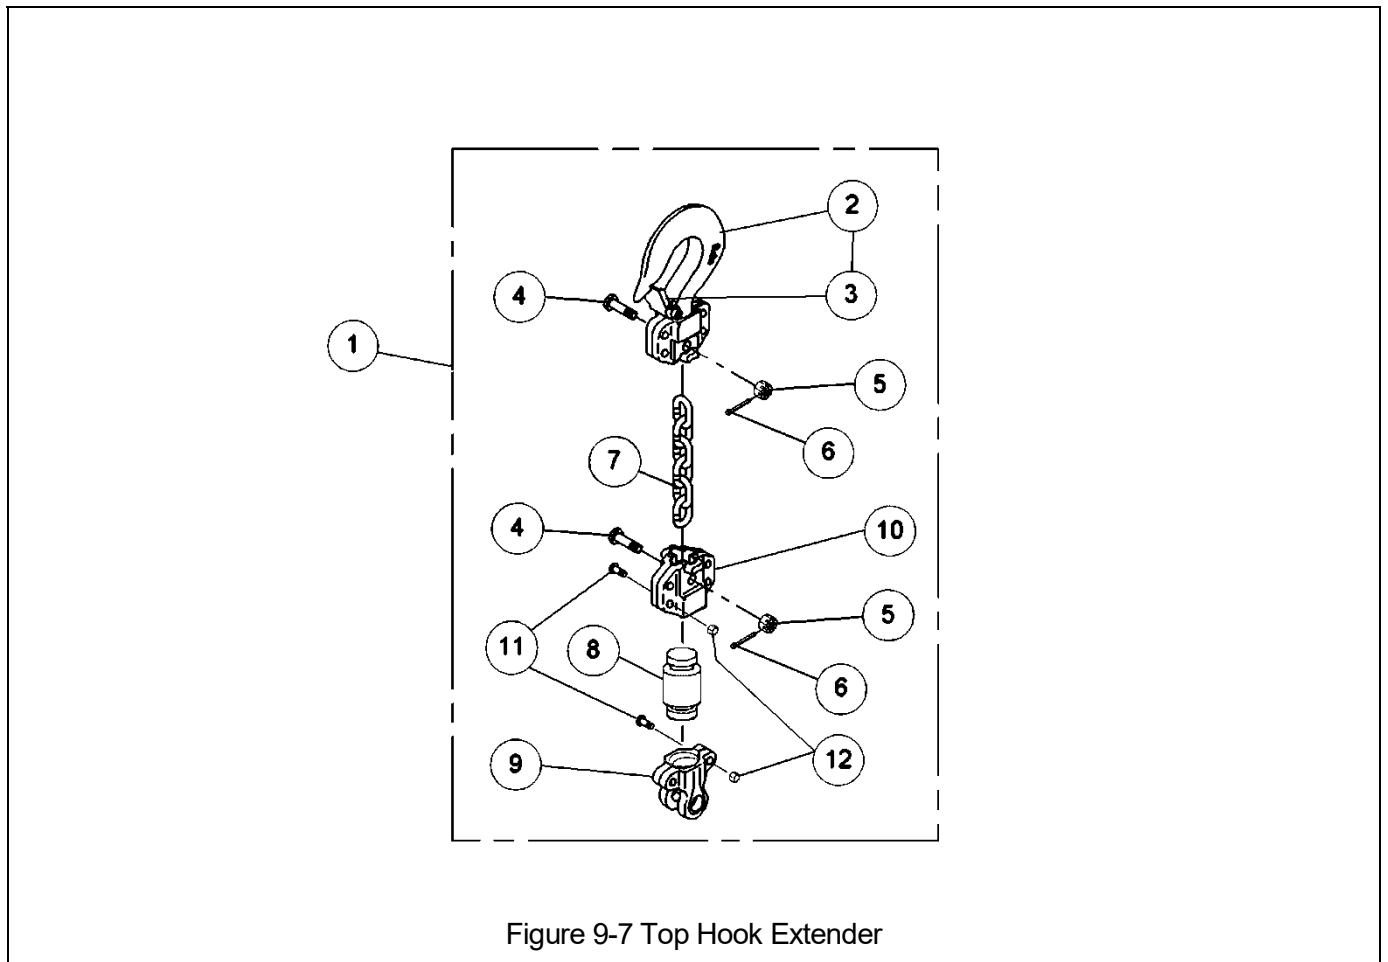


Figure 9-7 Top Hook Extender

Top Hook Extender

| Fig. No. | Name | Parts Per Hoist | ¼ Ton | 1 Ton | 1 ½ Ton | 2 Ton | 2 ¼ Ton | 3 Ton |
|----------|----------------------|-----------------|-------------|-------------|-------------|-------------|-------------|-------------|
| 1 | Top Hook Extender | 1 | 6073001 | 6073002 | 6073003 | 6073004 | 6073005 | 6073006 |
| 2 | Bottom Hook Assembly | 1 | L5BU0081021 | L5BU0101021 | L5BU0151021 | L5BU0201021 | L5BU0281021 | L5BU0301021 |
| 3 | Latch Assembly | 1 | L5BA0081071 | L5BA0101071 | L5BA0161071 | L5BA0251071 | | L5BA0321071 |
| 4 | Chain Pin | 1 | L4041008 | | M3041015 | L5BA0259041 | | L4BH0309041 |
| 5 | Slotted Nut | 1 | M3049005 | | M3049010 | M2049020 | | M2049020 |
| 6 | Split Pin | 1 | 9009402 | | 9009411 | 9009412 | | |
| 7 | Load Chain | FT | LCL5010NP | | LCL5015NP | LCL5028NP | | LCL5030NP |
| 8 | Extension Block | 1 | 60738 | | 60735 | 60736 | | 60737 |
| 9 | Top Yoke Kit | 1 | TYKITL5008 | | TYKITL5015 | TYKITL5028 | | TYKITL5030 |
| 10 | Bottom Yoke Kit | 1 | BYKITL5008 | | BYKITL5015 | BYKITL5028 | | BYKITL5030 |
| 11 | Button Head Screw | 6 | 9012601 | | 9012602 | | | |
| 12 | Flexloc® Nut | 6 | 9012603 | | 9012604 | | | |

9.3 Optional Parts

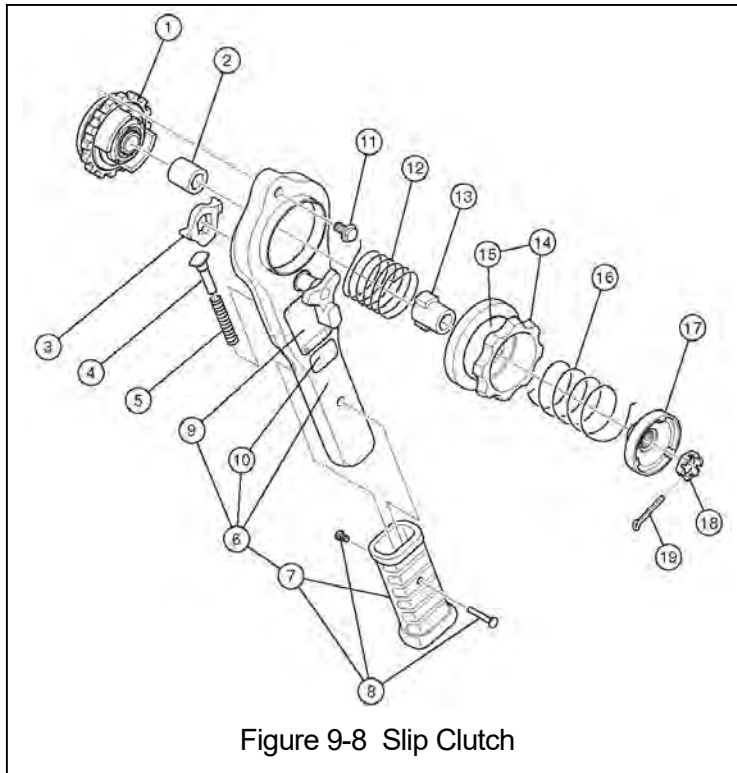


Figure 9-8 Slip Clutch

Slip Clutch

| Fig. No. | Part Name | Parts per Hoist | Capacity (Tons) | | | | | | | | |
|----------|--------------------|-----------------|-----------------|--------------|--------------|--------------|--------------|--------------|--------------|--------------|--|
| | | | ¾ | 1 | 1½ | 2 | 2¾ | 3 | 6 | 9 | |
| 1 | Friction Clutch | 1 | L5FA0085301 | | | | | L5FA0325301 | | | |
| 2 | Spacer | 1 | L5FA0089310 | | | | | L5FA0329310 | | | |
| 3 | Select Pawl | 1 | L4218008 | | | | | L4218015 | | | |
| 4 | Spring Shaft | 1 | L4222008 | | | | | L4222015 | | | |
| 5 | Select Pawl Spring | 1 | L4223008 | | | | | L4223015 | | | |
| 6 | Lever Assembly | 1 | L5BA0086211 | | L5BA0166211 | | | L5BA0326211 | | | |
| 7 | Grip | 1 | L5BA0081231 | | L4BA0081231 | | | L4BA0151231 | | | |
| 8 | Binding Screws | 1 | L5BA0089232 | | | | | L5BA0329232 | | | |
| 9 | Nameplate | 1 | L5BU00-89800 | L5BU01-09800 | L5BU01-59800 | L5BU02-09800 | L5BU02-89800 | L5BU03-09800 | L5BU06-09800 | L5BU09-09800 | |
| 10 | Warning Label | 1 | L5FA0089921 | | L5FA0169921 | | | L5FA0329921 | | | |
| 11 | Hex Cap Screw | 1 | L4221008 | | | | | L4221015 | | | |
| 12 | Brake Spring | 1 | L5FA0089207 | | | | | L5FA0329207 | | | |
| 13 | Cam Guide | 1 | L5FA0089203 | | | | | L5FA0329203 | | | |
| 14 | Free Chain Knob | 1 | L5FA0089201 | | | | | L5FA0329201 | | | |
| 15 | Nameplate U | 1 | L4810008 | | | | | | | | |
| 16 | Free Chain Spring | 1 | L5FA0089205 | | | | | L5FA0329205 | | | |
| 17 | Spring Holder | 1 | L5FA0089208 | | | | | L5FA0329208 | | | |
| 18 | Slotted Nut | 1 | M2049020 | | | | | | | | |
| 19 | Split/Cotter Pin | 1 | 9009412 | | | | | | | | |

NOTES

NOTES

NOTES



Harrington Hoists, Inc.
401 West End Avenue
Manheim, PA 17545

Toll Free: 800-233-3010
Phone: 717-665-2000
Fax: 717-665-2861

L5LBOM